


EN

USER
MANUAL

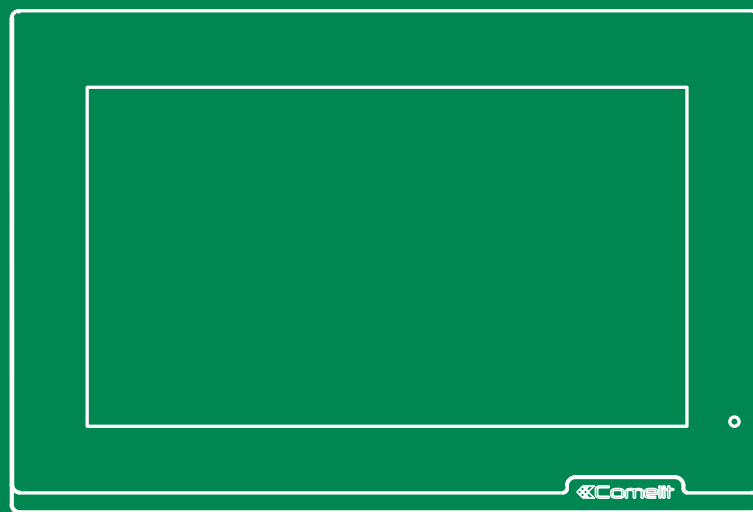

Venice door entry monitor

Art. 6814W

 **Comelit**[®]
Passion. Technology. Design.


Warning

- This Comelit product has been designed and manufactured for use in the creation of audio and video communication systems in residential, commercial, industrial and public buildings.
- All activities connected to the installation of Comelit products must be carried out by qualified technical personnel, with careful observation of the indications provided in the manuals / instruction sheets supplied with those products.
- **Comelit Group S.p.A.** declines any responsibility for improper use of the apparatus, for modifications made by third parties for any reason or purpose, and for the use of accessories and materials which are not originals.
- **Caution!** In order to reduce the risk of faults and electric shocks: do not open the device or carry out any repairs yourself. If necessary, request the services of qualified personnel. Do not insert objects or pour liquids into the device.
- Clean using a damp cloth. Do not use alcohol or other aggressive products.
- Any repairs must be carried out:
 - for the products themselves, exclusively by **Comelit Group S.p.A.**,
 - for the systems, by qualified technical personnel.
- **Comelit Group S.p.A.** does not assume any responsibility for:
 - any purpose other than the intended use
 - failure to observe the indications and warnings contained in this manual / instruction sheet.
- **Comelit Group S.p.A.** reserves the right to change the information provided in this manual / instruction sheet at any time and without prior notice.

Table of contents

| | | | |
|---|----------|---|-----------|
| Description | 3 | Settings | 8 |
| Menu | 3 | Volume adjustment | 8 |
| Set time | 3 | Backlight adjustment | 8 |
| Answering an incoming call | 4 | Melody settings | 8 |
| Functions available..... | 4 | Hands-free | 8 |
| Intercoms | 4 | Lock keypad and touch screen..... | 9 |
| Cameras | 5 | Audio-video answering service | 9 |
| Actuators | 5 | Record always | 9 |
| Doors open | 5 | Record external answering service message | 9 |
| Audio/Video Answering Service | 5 | Record internal answering service message | 9 |
| External calls video memory..... | 5 | Function scheduling..... | 9 |
| External/Internal calls answering service message | 5 | New scheduling | 9 |
| Message..... | 5 | Edit scheduling | 10 |
| Call divert..... | 6 | Delete scheduling | 10 |
| Multiple addresses..... | 6 | Copy programming | 10 |
| List of calls..... | 6 | Burglar alarm | 10 |
| External video memory | 6 | Change password..... | 10 |
| Missed internal calls | 6 | Set alarm times..... | 10 |
| Alarm | 6 | Installer setup menu..... | 11 |
| User setup menu | 7 | NAVIGATION TREE..... | 11 |
| Language | 7 | | |
| Information | 7 | | |

Description

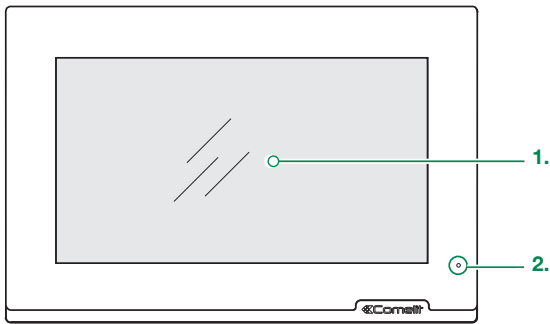


1. LCD Display
 - Touch screen
 - 7" 16:9
 - Pixel 1024x600
2. Microphone


Menu

The menu icons vary depending on the type of system installed and the functions available. To navigate the menu, simply use your finger to touch the icon corresponding to the desired function.


- ▶ Touch the display to access the main menu

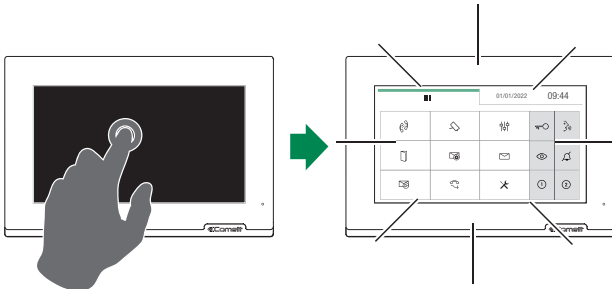

- ▶ Press the desired menu option to select it

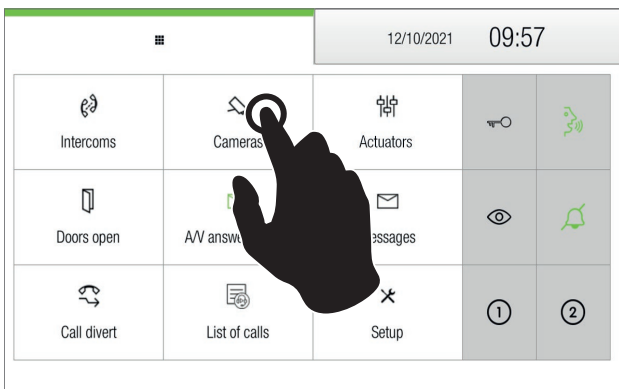



- ▶ Navigate the menus by scrolling up/down through the page

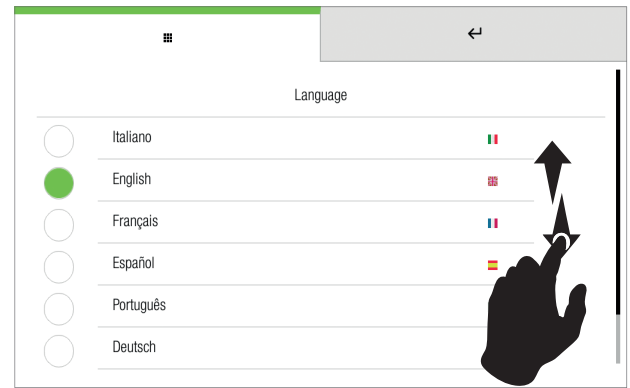

- ▶ Short press the icon ← to return to the previous screen

Set time

This function allows you to set the time and date of the device.

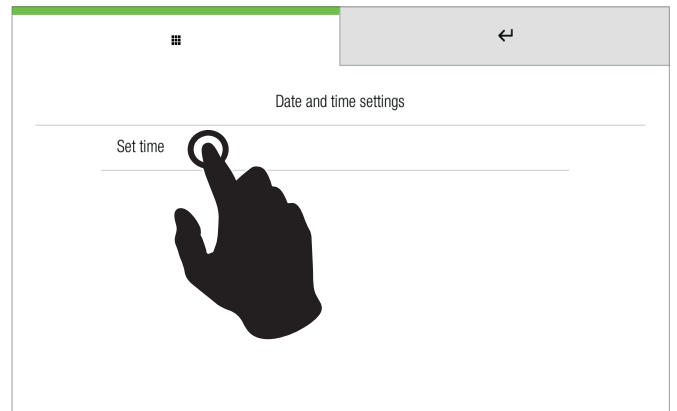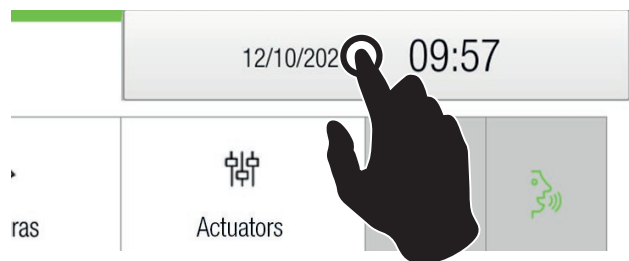


- ▶ Select "Set time"

Set the desired values for day / month / year / hours / minutes

Save the configuration

Answering an incoming call

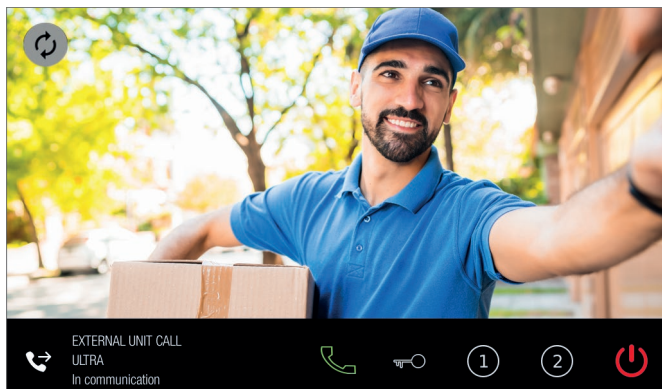

Press to enable the audio



Press to disable the audio

» It is possible to resume the conversation with the external unit for as long as the entire duration of the video entry phone call



Press to activate the lock-release relay



Press to activate the programmed relay




Press to end the video entry phone call



Press + or - to increase or decrease the volume




In caso di display spento durante la chiamata videocitofonica premere l'icona per la visione sull'esterno.

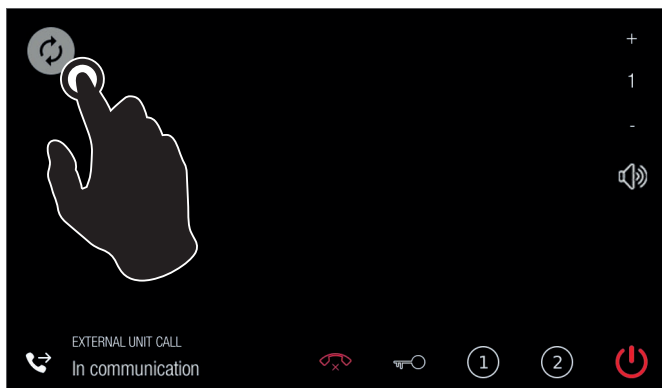

Functions available

Funzioni disponibili in base alla configurazione del proprio dispositivo. Verificare con il proprio installatore le impostazioni.

La schermata Home, i tasti e le funzionalità variano a seconda dalla configurazione assegnata al proprio dispositivo.

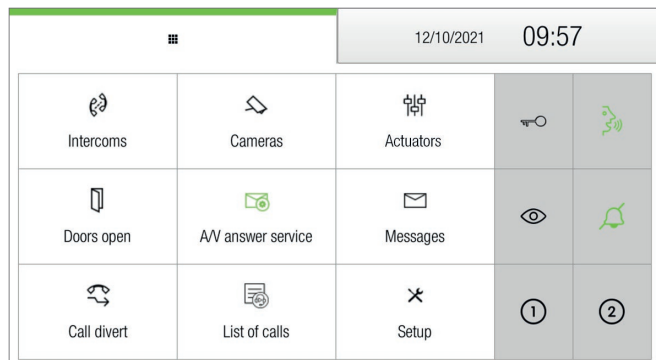

[programmable]

LOCK-RELEASE: opens the corresponding door lock

ACTUATOR: allows activation of the associated relay



AUTOMATIC ANSWER (Hands-Free mode): on receipt of a call the monitor will start communicating automatically

► Press to enable/disable the function.



[programmable]

SELF-IGNITION: allows ignition of the external video unit, and therefore viewing of the external image

INTERCOM / SELF-IGNITION / CALL PRIORITY 1-4 / LOCK-RELEASE / ACTUATOR / ACTIVATE OUTPUT / FUNCTION DISABLED



PRIVACY [default]: the ringtone will be silenced on receipt of a call from the external unit and from the switchboard

[programmable]

DOCTOR: allows automatic operation of the lock-release on receipt of a call from an external unit

PRIVACY + DOCTOR: activates both functions



[programmable]

INTERCOM / SELF-IGNITION / CALL PRIORITY 1-4 / LOCK-RELEASE / ACTUATOR / ACTIVATE OUTPUT / FUNCTION DISABLED



The icon changes colour to indicate that the function is active.

Intercoms


The menu can be used to make an intercom call to a ViP address saved in the directory.



► Press the icon to access the directory

► In the directory, select the address you want to call, or enter the ViP address for the apartment to begin a general call.


1. Press the icon **123** to call a specific ViP address

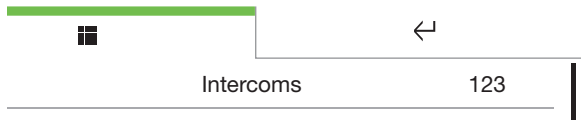

2. Enter the address in the field to start the communication
3. Confirm or cancel by selecting "YES" or "NO"

Cameras


This function allows you to view a directory of cameras and to start live streaming.

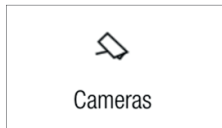

- ▶ Press the icon to access the function, then select from the directory the camera to be interrogated

Actuators


This function allows you to activate an actuator by selecting it from the programmed directory.

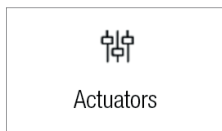

- ▶ Access the dedicated section, then select the command you wish to activate from the directory


Doors open

This function allows you to view a directory of doors to check their status (open/closed).

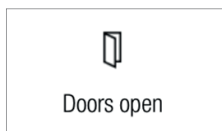


- ▶ Press the icon in the main menu to access the directory
 - » the green icon indicates that the door is open
 - » the black icon indicates that the door is closed

- ▶ Select the door to interrogate in order to start live streaming from the camera

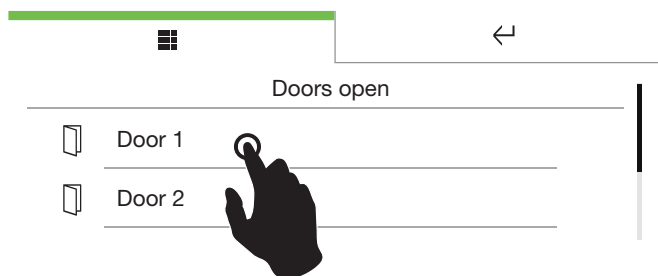


Audio/Video Answering Service

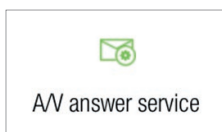

- ▶ Press the icon to access the dedicated sub-menu

External calls video memory

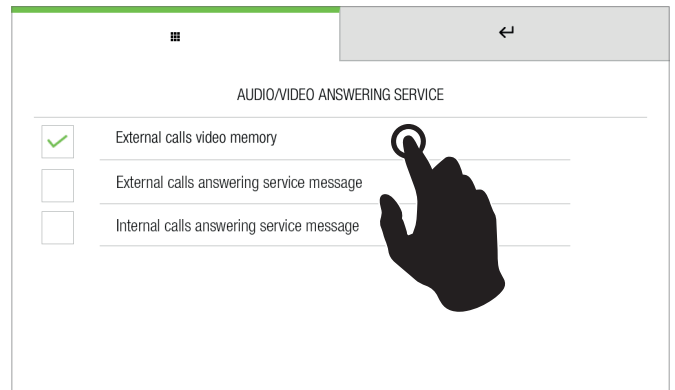

The *External calls video memory* function allows you to enable/disable the Answering service on the device.

- If the function is enabled the audio-video recording automatically starts in the event of no reply.
- If the "Record always" function in Setup menu is enabled, the audio-video recording automatically starts on receipt of a call from an external unit.


I messaggi saranno disponibili nel menu List of calls.

- ▶ Tick the box to enable the function



» The icon in the main menu changes colour to indicate that the function is active.

External/Internal calls answering service message

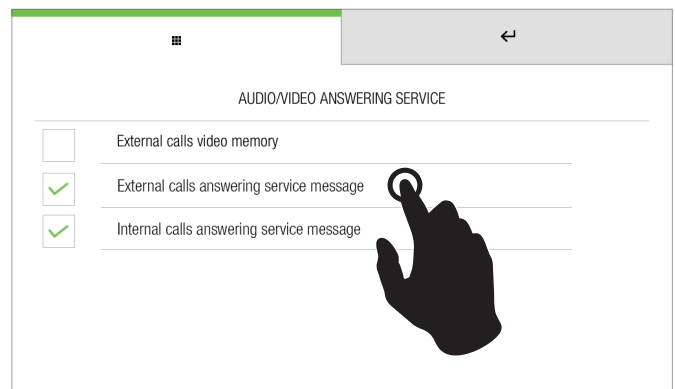

Spuntando la casella viene abilitato il messaggio di cortesia (registrato in precedenza nel menu Setup) che verrà riprodotto dal posto esterno ad ogni invio di chiamata.

Maggiori info a pag. 9


- ▶ Tick the box to enable the function



» The icon in the main menu changes colour to indicate that the function is active.

Message

Menu dedicato alla messaggistica ViP. I messaggi provengono dal centralino o dal software ViP Manager.

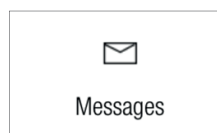

Call divert

This function allows you to quickly enable/disable the call divert function.




- ▶ Press the icon in the main menu
- » *The icon in the main menu changes colour to indicate that the function is active/deactivate.*


Multiple addresses

La funzione consente al videocitofono di ricevere chiamate dirette ad altri indirizzi ViP.


- i** • La funzione si riferisce sia alle chiamate intercomunicanti, sia a quelle inviate dal posto esterno.
- La chiamata viene inviata ad entrambi gli indirizzi.

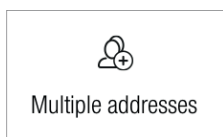


- ▶ Premere l'icona per accedere al sottomenu dedicato.

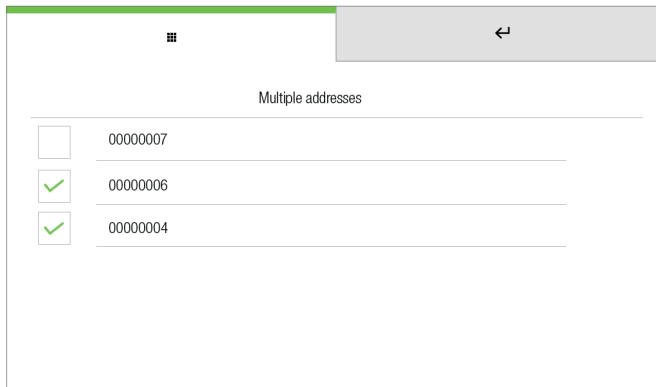


- ▶ Spuntare la casella dell'indirizzo desiderato per abilitare/disabilitare la funzione.

 » *L'icona in home cambia colore per segnalare la presenza di almeno un indirizzo multiple abilitato.*

List of calls

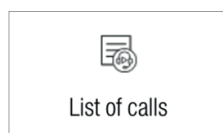

- ▶ Press to access the List of calls menu.

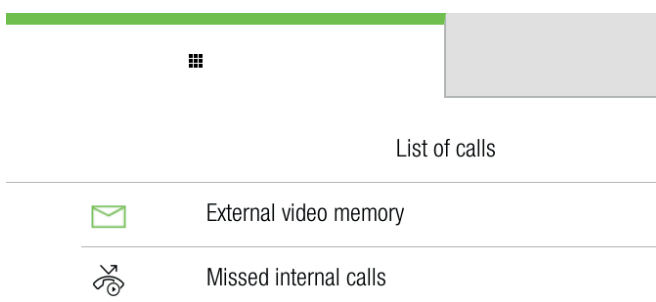


i The green icon indicates that there is at least one new

message (that has never been viewed)

The black icon indicates that all messages have already been viewed

External video memory

- ▶ Press *External video memory* to view the videos recorded by the video memory service.

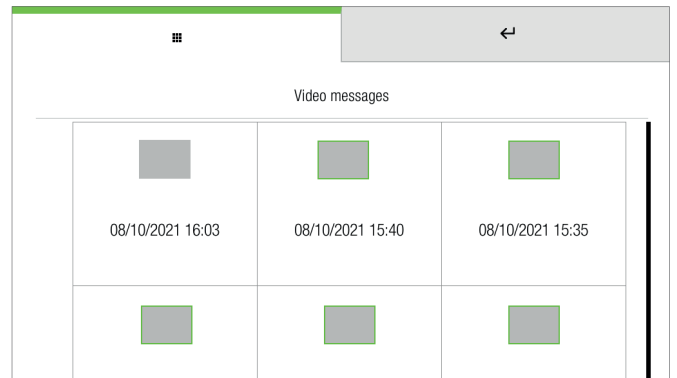


- ▶ *Short press* on the video recording preview to START playback
- ▶ *Short press* on the video recording to STOP playback
- ▶ *Long press* to DELETE the video recording. Confirm or cancel by selecting "YES" or "NO"

i The green rectangle indicates that the message has already been viewed.

Missed internal calls


- ▶ Press to access the sub-menu.

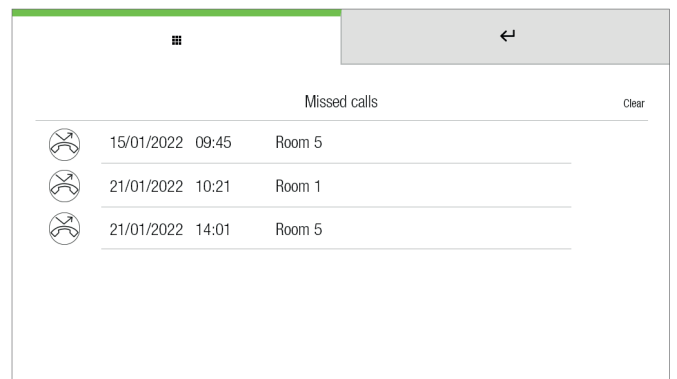

- ▶ Short press on the missed call to call the device back. Confirm or cancel by selecting "YES" or "NO".
- ▶ Long press on the missed call to delete it. Confirm or cancel by selecting "YES" or "NO".
- ▶ Press "Clear" to deleting all items from selected call log. Confirm or cancel by selecting "YES" or "NO".

Alarm

La funzione consente l'invio di una chiamata ViP prioritaria a un indirizzo ViP specifico a fronte dell'attivazione di un ingresso configurato come Burglar alarm.

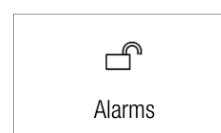

To enable:


- ▶ Press to enables the alarm system.

- ▶ Confirm or cancel by selecting “YES” or “NO”.

- » *Inizia il conto alla rovescia del tempo di uscita*
- » *Premendo annulla è possibile interrompere il countdown*
- » *Un pop-up e il segnale acustico confermano il corretto inserimento dell’antifurto.*



- » *The icon in the main menu has changed to indicate that the function is active.*

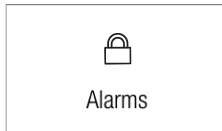


To disable:

- ▶ *Digitare il codice di disinserimento antifurto e premere ✓ (default 1111)*

- » *Un pop-up e il segnale acustico confermano il corretto disinserimento dell’antifurto.*

Scatta l’antifurto

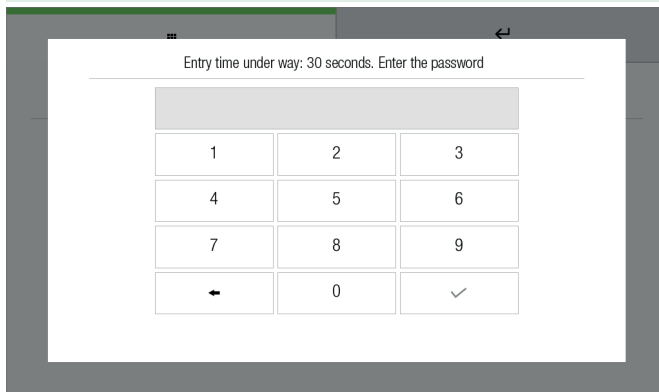

- » *Inizia il conto alla rovescia che anticipa la sirena di allarme.*




- » *The icon in the main menu has changed.*


To disable:

- ▶ *Digitare il codice di disinserimento antifurto e premere ✓ (default 1111)*
- » *Un pop-up e il segnale acustico confermano il corretto disinserimento dell’antifurto.*

User setup menu

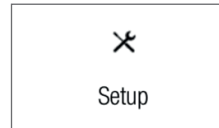


- ▶ Press the icon to access the Setup menu
- ▶ Select *User setup menu*

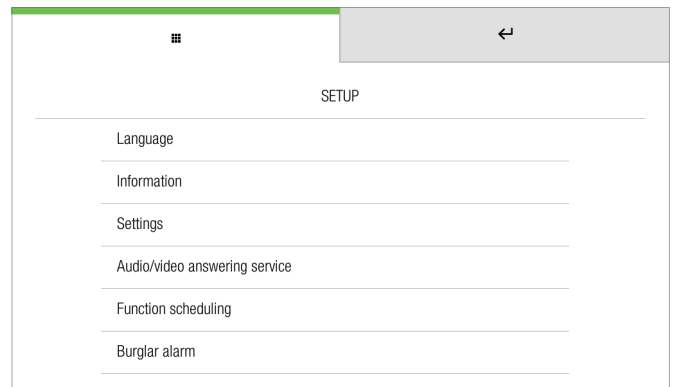


- ▶ To access the desired sub-menu, press the corresponding option

Language

Dal menu Setup è possibile modificare la lingua del dispositivo.

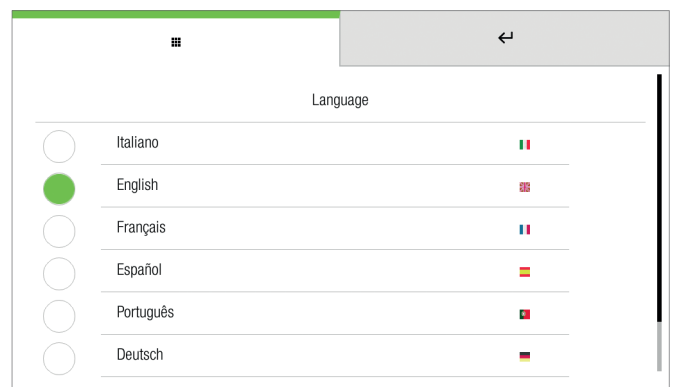


- ▶ Select the desired language by pressing the relative row, then confirm the selection

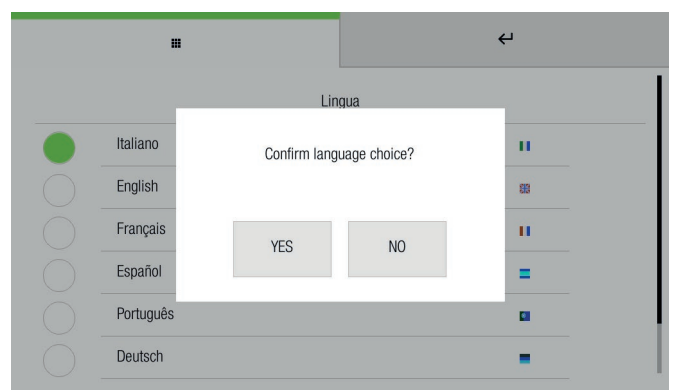


- ▶ Confirm or cancel by selecting “YES” or “NO”


Information

This menu provides technical information about the device (e.g. type of device, versions, addresses, etc.)

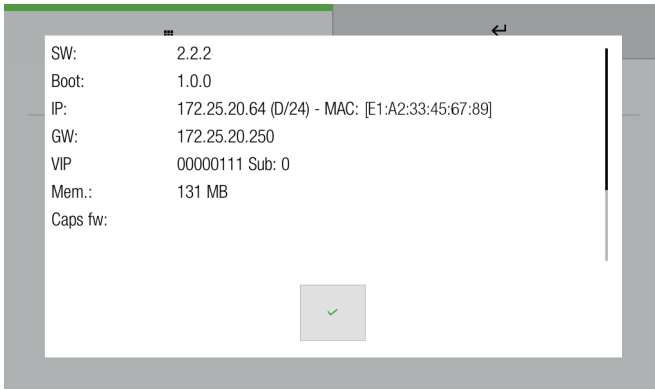

 Press the confirm icon to exit the screen


Settings

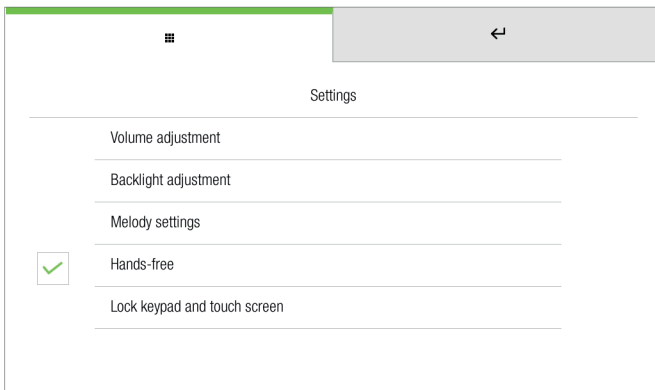


Volume adjustment

The menu allows you to manage and control the audio volumes associated with the various functions of the device.

- ▶ Select one of the options in the list
- ▶ Move the cursor to adjust the volume

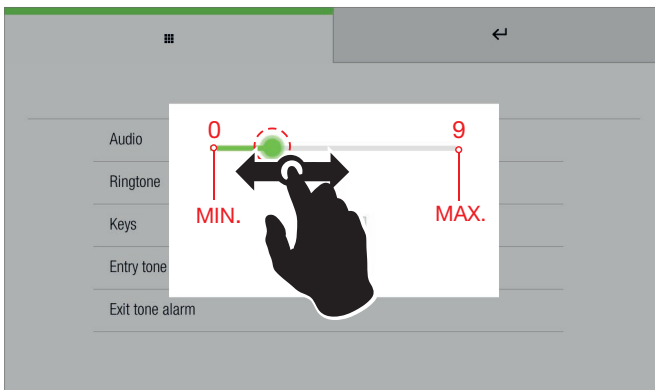



 Save the configuration

Backlight adjustment

It is possible to increase and reduce the monitor backlighting level.

- ▶ Move the cursor to adjust the brightness


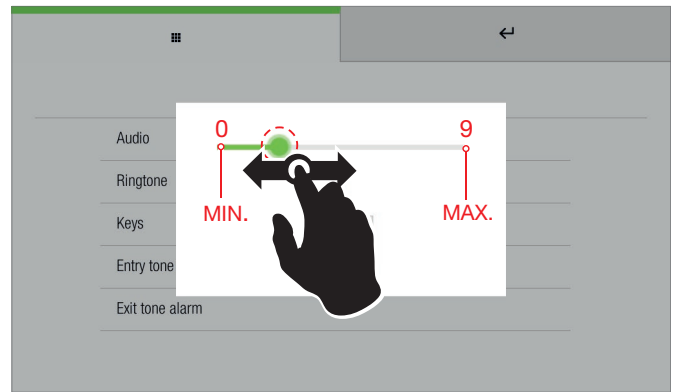



 Save the configuration

Melody settings

From the menu you can choose a melody for each of the device's call functions.

 - ▶ Select one of the options in the list

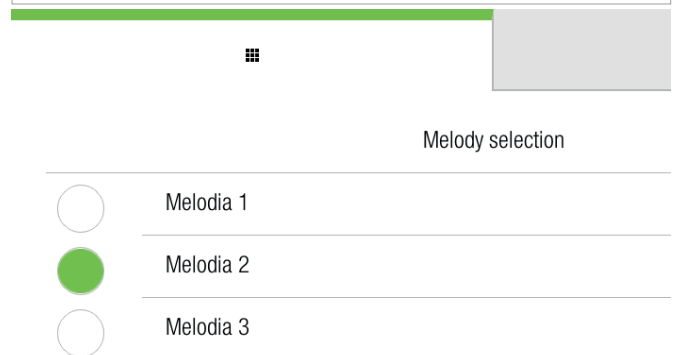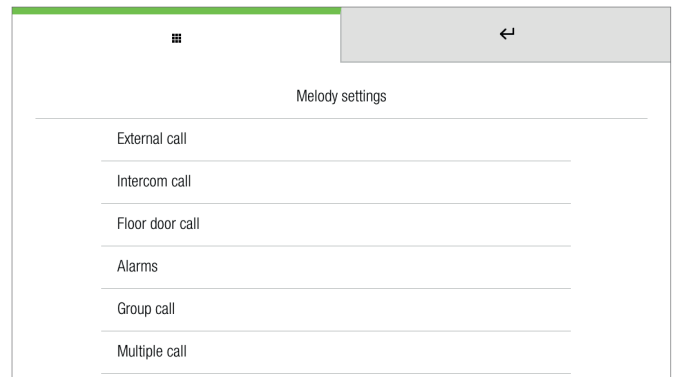

- ▶ Press the name of the melody to hear a preview
- ▶ Press the circle to conform the selected ringtone
- ▶ Press and release the icon  to return to the previous screen.

Hands-free

On receipt of a call the door entry monitor will start the communication automatically with the external unit.


- ▶ Tick the box to enable the function



» The icon in the main menu changes colour to indicate that the function is active.


Lock keypad and touch screen

The function can be used to lock the device touch screen for 60 seconds, for cleaning purposes.

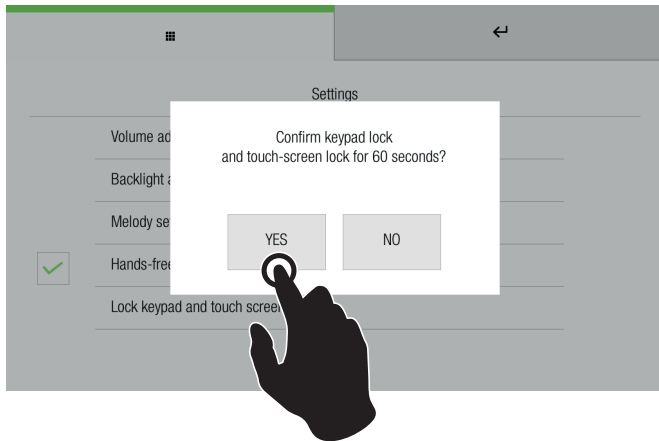

- ▶ Confirm or cancel by selecting “YES” or “NO”.
- » After 60 seconds, the screen is unlocked automatically

Audio-video answering service

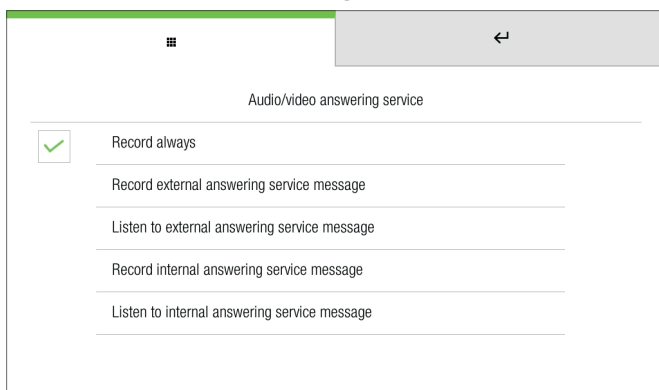

Record always

This function automatically starts audio/video recording on receipt of a call from an external unit.

- ▶ Tick the box to enable the function



The Video memory box must also be ticked

Record external answering service message

Da questo menu è possibile registrare un *messaggio di cortesia* che, se abilitato nel menu in home, verrà riprodotto dal posto esterno ad ogni invio di chiamata.

- ▶ Press RECORD to start recording an audio message, then press Save.

- ▶ Press LISTEN to listen to the recorded audio message.

Record internal answering service message

Da questo menu è possibile registrare un *messaggio di cortesia* che, se abilitato nel menu in home, verrà riprodotto sul videocitofono intercomunicante chiamante ad ogni invio di chiamata verso il nostro dispositivo.


- ▶ Press RECORD to start recording an audio message, then press Save.
- ▶ Press LISTEN to listen to the recorded audio message.

Function scheduling

You can set automatic execution, on a daily basis, of the Privacy, Doctor modes or enable both.

SILENT MODE (Privacy function): The ringtone will be silenced on receipt of a call from the external unit and from the switchboard.

AUTOMATIC LOCK-RELEASE ON RECEIPT OF CALL (Doctor function): Automatic activation of the Lock-release relay on receipt of a call originating from the external unit.

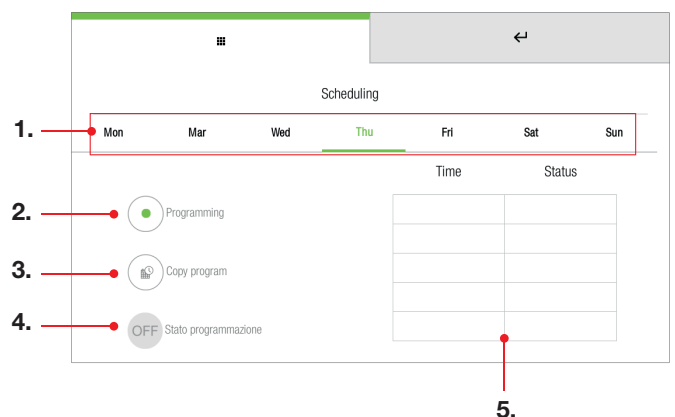


1. Days of the week bar
2. Enter programming mode
3. Copy schedule
4. Enable/disable schedule
5. View previously set schedule

New scheduling




- ▶ Select the icon to enter programming mode
- ▶ Select the day of the week for which to program the schedule
- » The day being programmed is highlighted in green colour.

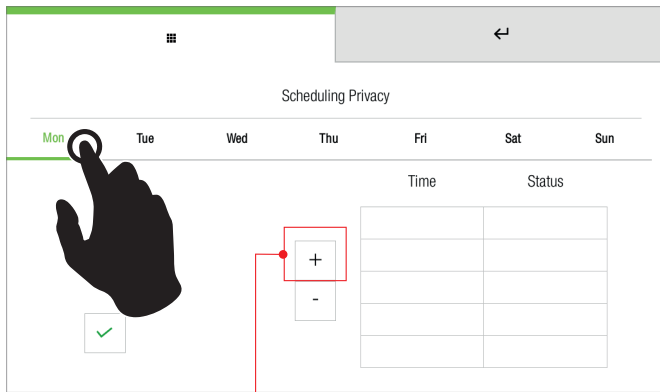



6.

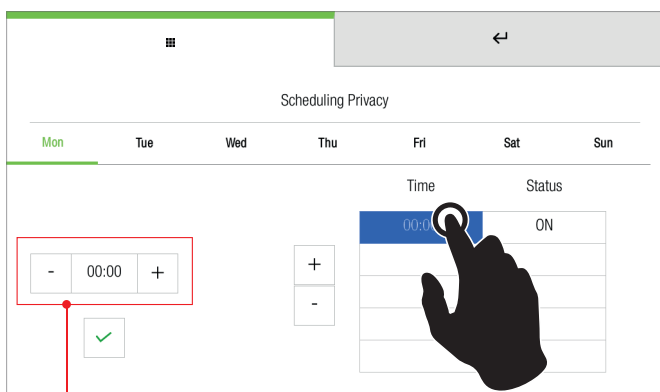- ▶ Press + to add a new schedule (See point 6.)
- ▶ Select 00:00 cell
 - » The cell being programmed is highlighted in blue colour.




7.

- ▶ Set the command send time using - and + (See point 7.)
- ▶ Proceed with the next field, selecting the “Status” cell
 - » The cell being programmed is highlighted in blue colour.
- ▶ Set the output status using - and + (See point 7.)
- ▶ Press + to add a new schedule (See point 6.), or press  to confirm, otherwise press  to exit.



» The icon in the main menu changes colour to indicate that the function is active.

Edit scheduling

-  ▶ Select the icon to enter programming mode
- ▶ Select the cell to be edited
 - » The cell being programmed is highlighted in blue colour.
- ▶ Proceed with the changes




▶ Confirm




▶ Or exit to cancel

Delete scheduling

-  ▶ Select the icon to enter programming mode
- ▶ Select a cell in the row you want to delete

» The cell being programmed is highlighted in blue colour.

▶ Press - to delete (See point 6.)

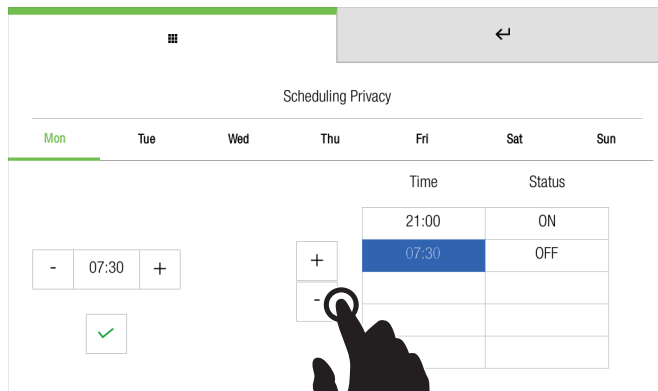

▶ Confirm




▶ Or exit to cancel

Copy programming

The “Copy program” function allows quick scheduling for the other days of the week using previously saved schedules.



1. Select the day of the week you want to copy and press the Copy program icon
2. Select the days to which you want to apply the programming
 - » The days being programmed are highlighted in red.
3. Confirm

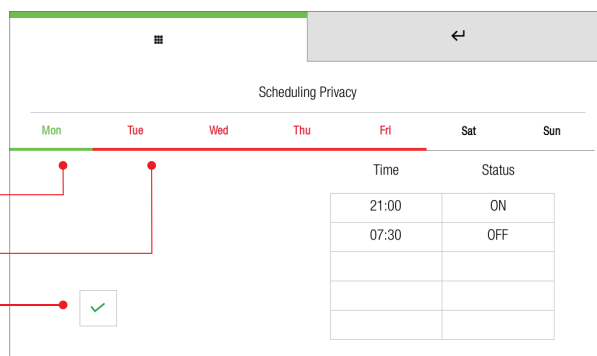

Burglar alarm

Change password

This menu can be used to change the password (Default 1111)



The procedure requires the burglar user password!

Set alarm times

This menu can be used to adjust the activation/deactivation


delay for the Burglar alarm, as well as its duration, by setting a value in seconds.

| Set alarm times | | | | |
|-----------------|----|---|--|---|
| Entry time | 10 | - | | + |
| Exit time | 10 | - | | + |
| Alarm duration | 30 | - | | + |

Installer setup menu



- ▶ Press the icon to access the Setup menu
- ▶ Select *Installer setup menu*

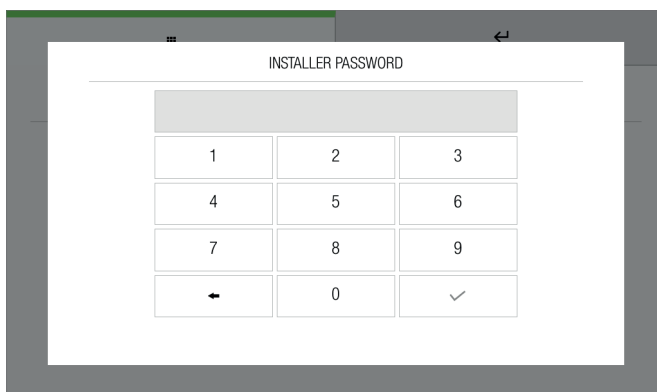

- ▶ Type in the password (default = 0000) and confirm ✓
- ▶ To access the desired sub-menu, press the corresponding option

NAVIGATION TREE

- INSTALLER SETUP MENU**
- Directories**
 - Intercoms
 - Actuators.....
 - Doors
 - Cameras.....
- Keys programming.....**
 - 🔑.....
 - Lock-release
 - Actuator
 - Function disabled
 - 1/2/👁.....
 - Intercom.....
 - Self-ignition.....
 - Alarms.....
 - Lock-release
 - Actuator
 - Activate output
 - Function disabled
 - 🔔.....
 - Privacy
 - Doctor
 - Privacy/doctor
 - Function disabled
- Reset**
 - Factory reset
- Addresses**
 - ViP address programming
 - Master.....
 - Slave.....
- Set ringtone repetition.....**
 - External call
 - Intercom call
 - Floor door call.....
- Set call times**
 - Awaiting reply
 - Talk
 - Intercom conversation
 - Reset wait time.....
 - Off delay time
- Call divert.....**
 - Configure ViP address.....
 - Wait time.....
 - Activate timed divert.....
 - Activate divert when busy
- Alarms**
 - Alarm
 - Panic.....
 - Fire.....
 - Priority call 4
- Master not connected signal**
- Configure multiple addresses.....**

CERTIFIED MANAGEMENT SYSTEMS



www.comelitgroup.com

Via Don Arrigoni, 5 - 24020 Rovetta (BG) - Italy

 **Comelit**[®]
Passion. Technology. Design.