

# SIEMENS

Switch/solar protection actuator UP 562S32

Schalt-/Sonnenschutzaktor UP 562S32

Actionneur de commutation/de protection solaire UP 562S32

Actuador de conmutación/de protección solar UP 562S32


Attuatore di commutazione/protezione solare UP 562S32

Atuador de proteção solar/comutação UP 562S32

Güneş koruma/devre aktüatörü UP 562S32

Приводной элемент переключателя/солнцезащитного устройства Schakel-/zonweringsactor inbouw 562S32

开关执行器 / 防晒执行器 UP 562S32

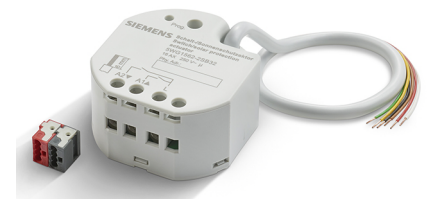

5WG1562-2SB32



Operating Instructions Betriebsanleitung  
Instruções de Serviço İşletme kılavuzu

Notice d'utilisation  
Руководство по эксплуатации

Instructivo  
Bedieningshandleiding



Istruzioni operative  
使用说明

82404207









Contents / Lieferumfang / Etendue de la livraison /  
Contenido / 供货范围

Required tools / Notwendige Werkzeuge /  
Outils nécessaires / Herramientas requeridas / 必要工具

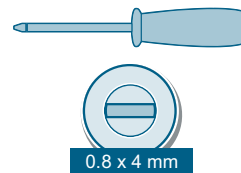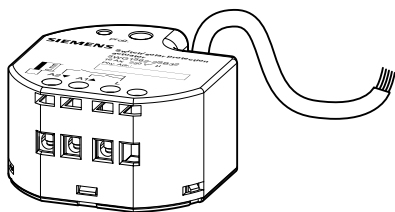

Assembly / Montage / Montage / Montaje / 安装

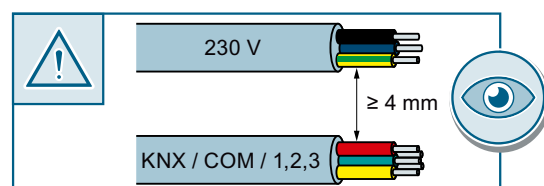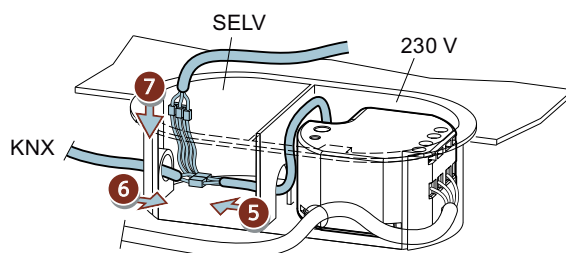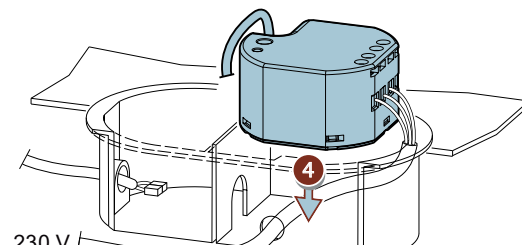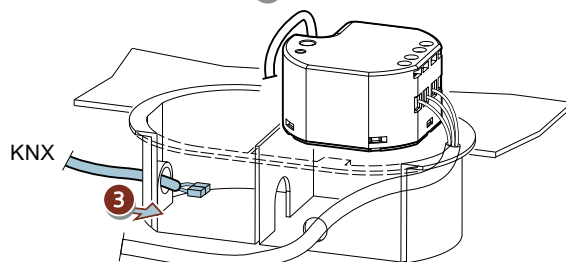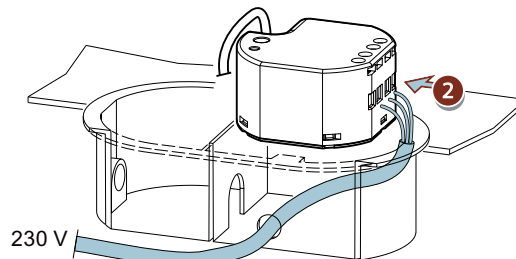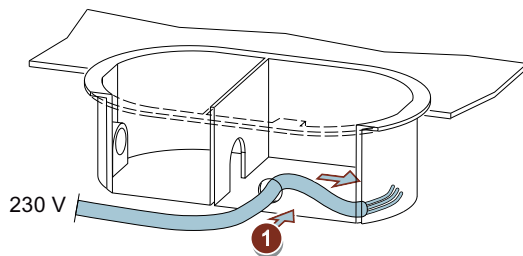



# Assembly / Montage / Montage / Montaje / 安装




5WG1592-8AB01



Technical Documentation:

[https://www.hqs.sbt.siemens.com/cps\\_product\\_data/data/search\\_find\\_en.htm?te1=5WG1&te2=592-8AB01](https://www.hqs.sbt.siemens.com/cps_product_data/data/search_find_en.htm?te1=5WG1&te2=592-8AB01)

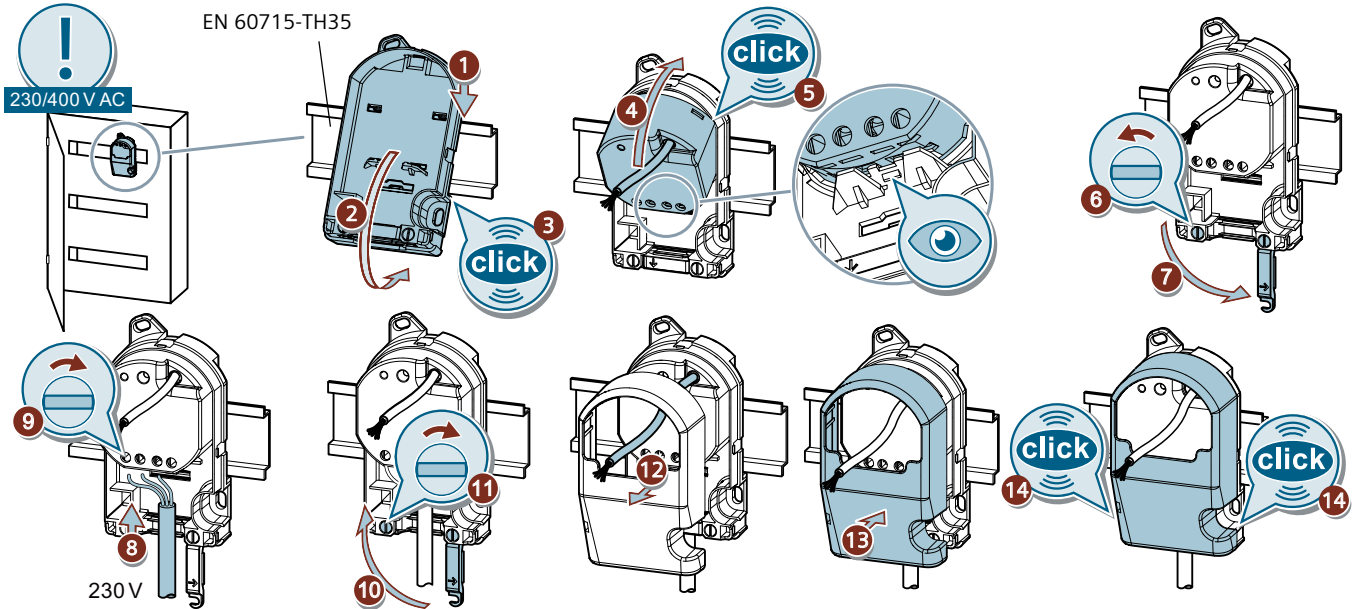

# Removal / Demontage / Démontage / Desmontaje / 拆卸




5WG1592-8AB01



Technical Documentation:

[https://www.hqs.sbt.siemens.com/cps\\_product\\_data/data/search\\_find\\_en.htm?te1=5WG1&te2=592-8AB01](https://www.hqs.sbt.siemens.com/cps_product_data/data/search_find_en.htm?te1=5WG1&te2=592-8AB01)

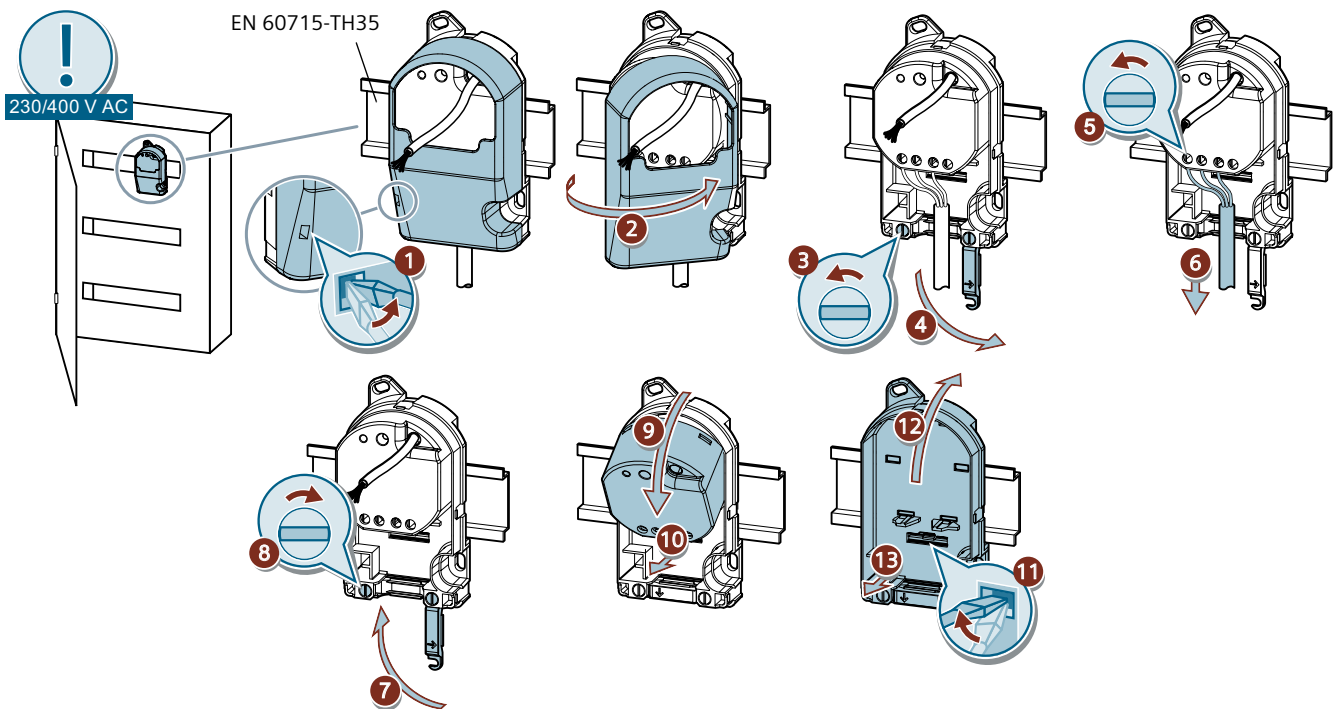




# Assembly / Montage / Montage / Montaje / 安装



5WG1592-8AB01



Technical Documentation:  
[https://www.hqs.sbt.siemens.com/cps\\_product\\_data/data/search\\_find\\_en.htm?te1=5WG1&te2=592-8AB01](https://www.hqs.sbt.siemens.com/cps_product_data/data/search_find_en.htm?te1=5WG1&te2=592-8AB01)

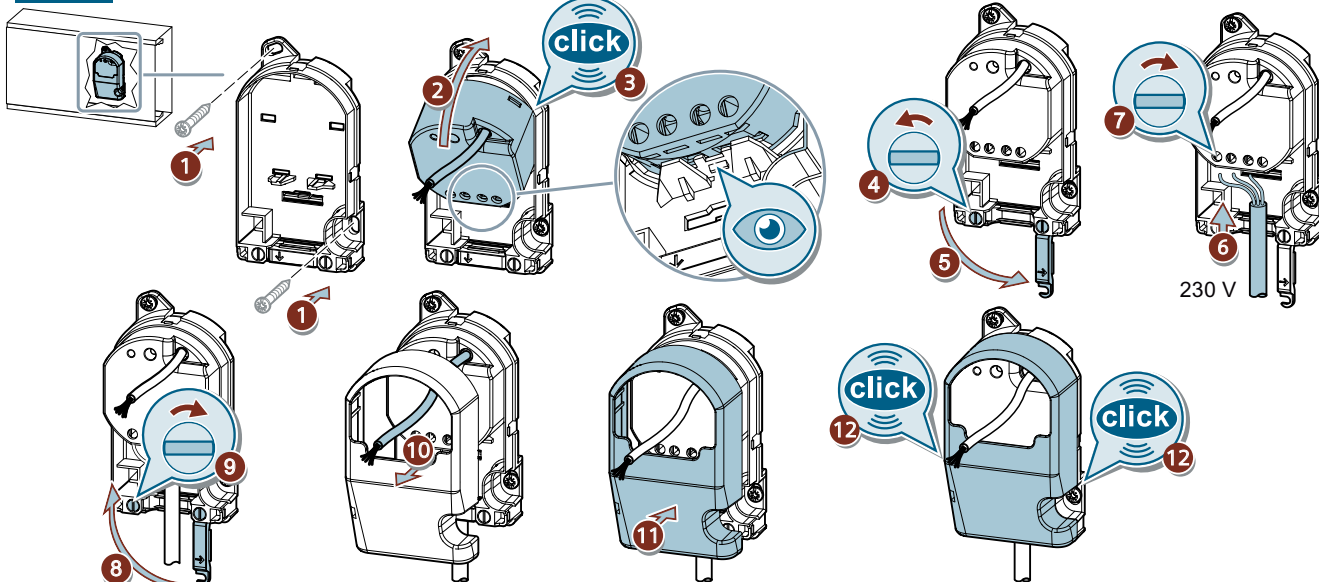


# Removal / Demontage / Démontage / Desmontaje / 拆卸





5WG1592-8AB01








Technical Documentation:  
[https://www.hqs.sbt.siemens.com/cps\\_product\\_data/data/search\\_find\\_en.htm?te1=5WG1&te2=592-8AB01](https://www.hqs.sbt.siemens.com/cps_product_data/data/search_find_en.htm?te1=5WG1&te2=592-8AB01)

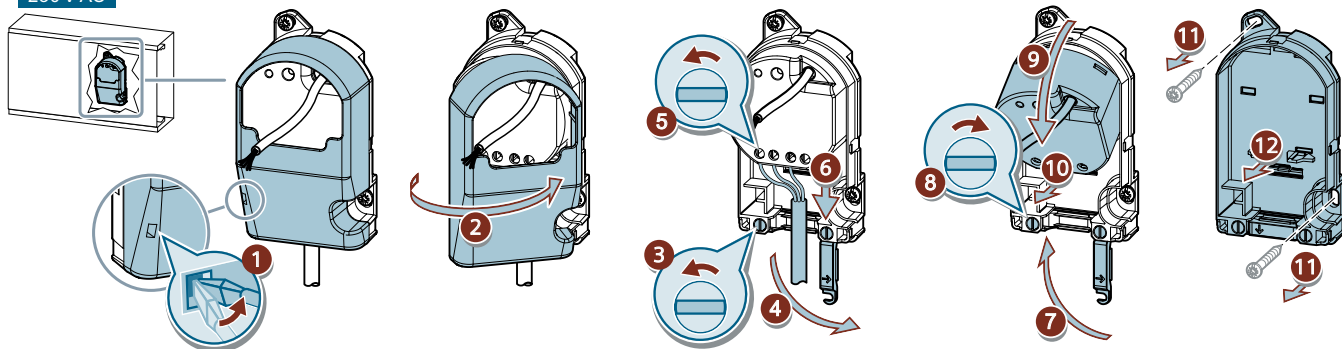

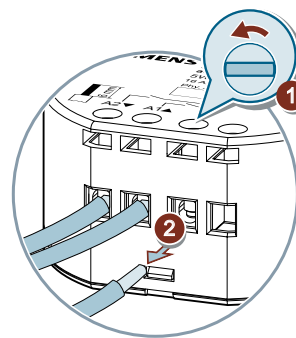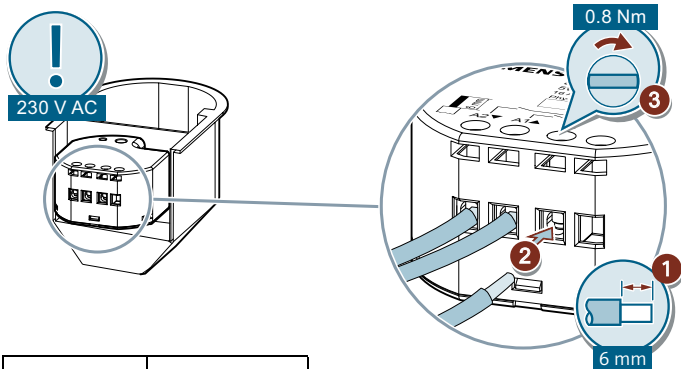



Cu	
	0.5 ... 4.0 mm <sup>2</sup>
	0.5 ... 2.5 mm <sup>2</sup>


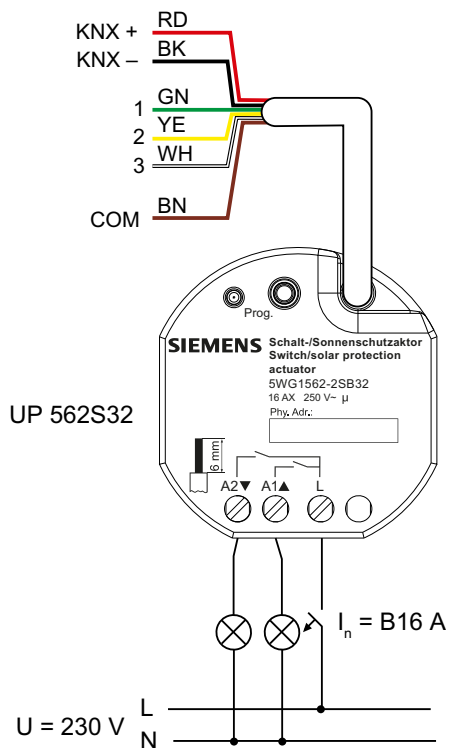
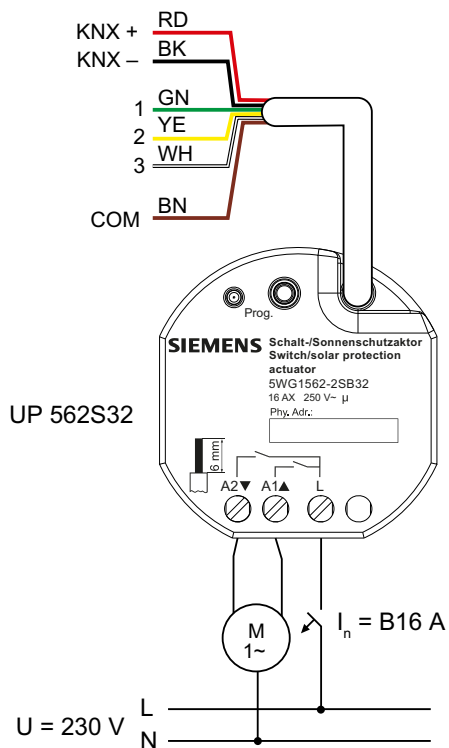
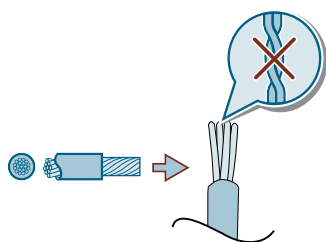


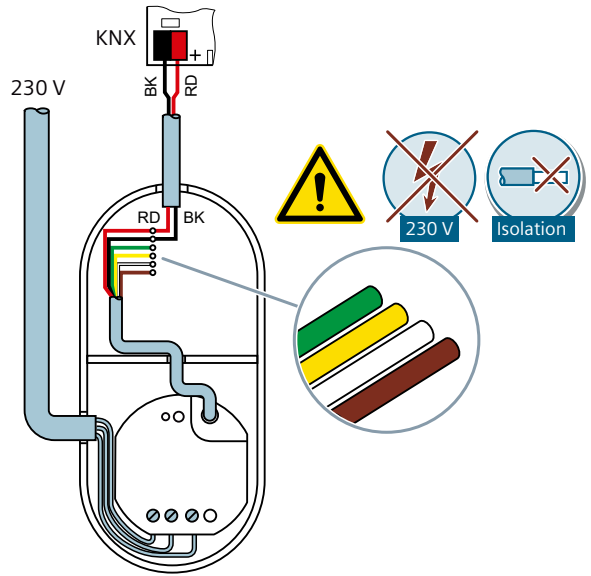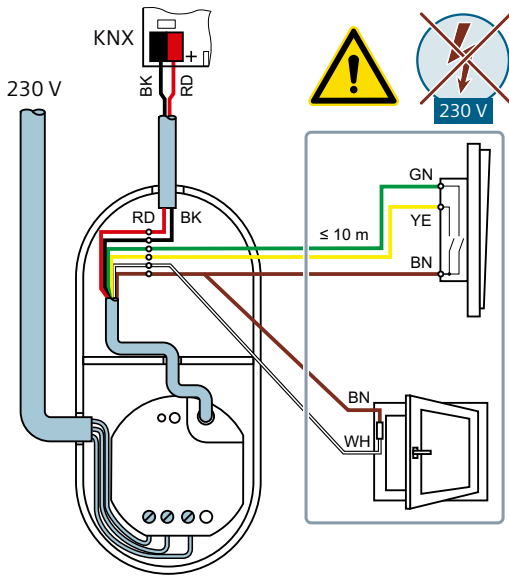

Test / Test / Test / Test / 测试

KNX 24 V DC typ. SELV

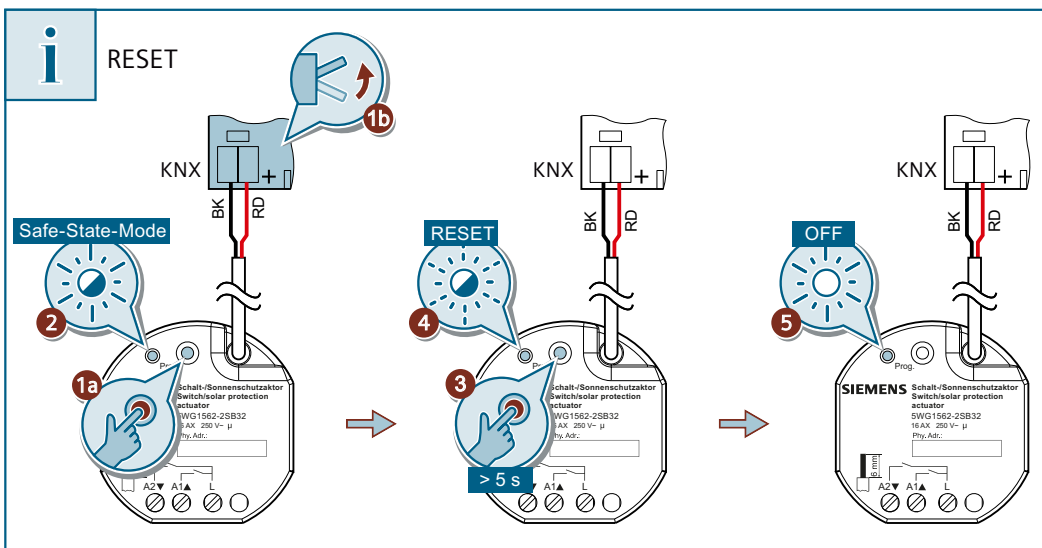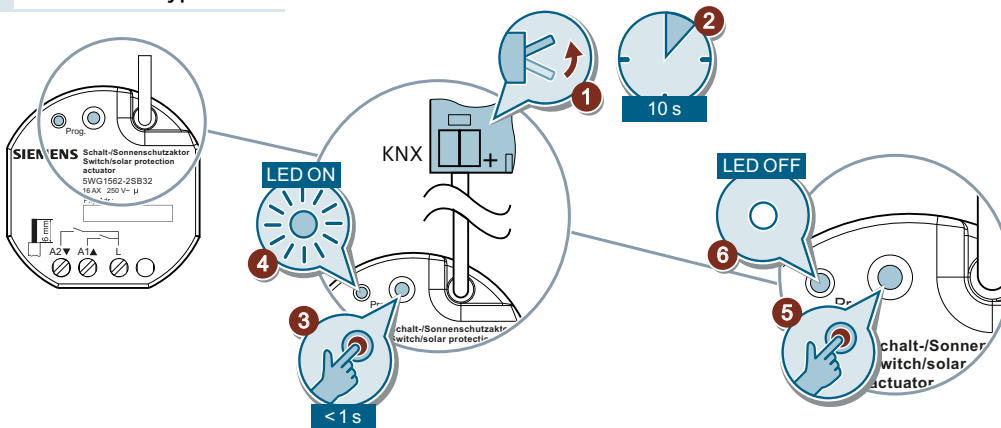

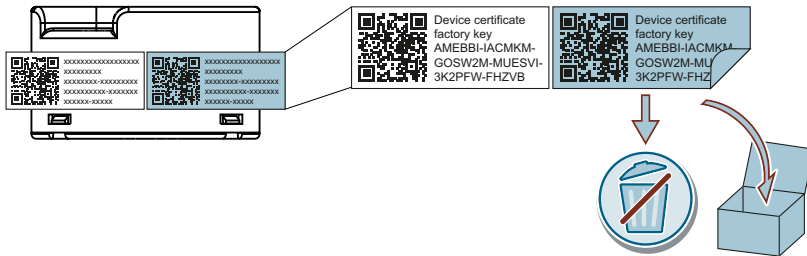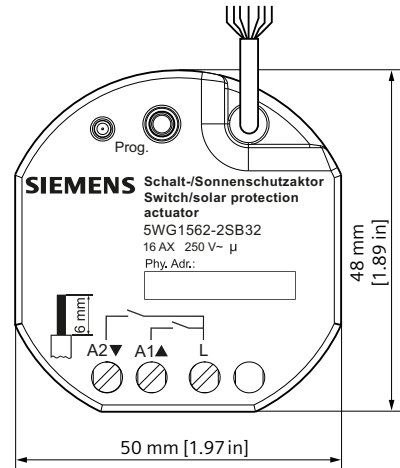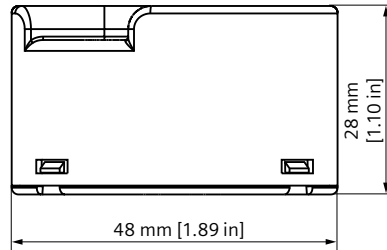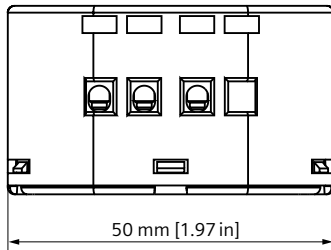

Technical Documentation:  
<https://www.siemens.com/gamma-td>



Technical Support  
<https://www.siemens.com/supportrequest>



FAQ:  
<https://support.industry.siemens.com/cs/ww/en/ps/faq>

