

Venice Wi-Fi 6854W



TECHNICAL MANUAL

Venice Wi-Fi door entry monitor - ViP system

Android door entry monitor compatible with the Comelit IP video entry system (ViP), with 7" touchscreen and the same flexibility as a tablet with the possibility to load third party apps. The apps must be verified and certified by Comelit to guarantee compatibility and to allow them to load. This means the user is offered a device which is no longer just a door entry monitor, but a controller for the home that can be used to manage the functions offered by systems from other manufacturers, for example managing home automation, intruder alarm and building services, plus accessing web pages and using pre-installed apps. The device has a LAN port and Wi-Fi connection to guarantee IP video entry system connection and the Internet connection required to use the installed apps.

Technical specifications

GENERAL DATA	
Product height (mm)	130
Product width (mm)	194
Product depth (mm)	15,9
Product color	White
Material	Plastic
Wall-mounted	Yes
DISPLAY FEATURES	
DISPLAY FEATURES Size (inches)	7
Size (inches) Aspect Ratio	
Size (inches) Aspect Ratio	16:9 Yes, capacitive
Size (inches) Aspect Ratio Touch screen	16:9 Yes, capacitive 1024x600
Size (inches) Aspect Ratio Touch screen Resolution (pixels)	16:9 Yes, capacitive 1024x600 Yes

AUDIO FEATURES

Tech. implemented Full-Duplex

ELECTRICAL CHARACTERISTICS

Type of power supply PoE, External power

Supply voltage 18-24 VDC

Supply voltage

12 VDC (max 1mt) with art. POESPLITTER

PoE power supply SPoE (24 VDC)

Absorption in stand-by 4,5 Watt Maximum absorption 7 Watt

HARDWARE FEATURES

Number of inputs 4

Communication ports RJ45 (Ethernet)

Ethernet ports 1

Network connection RJ45

Type of connections/ 1xEthernet 10/100

ports Mbit/s

Video encoding H.264

SETTINGS

Loudspeaker volume Yes

Microphone volume Yes

Ringtone volume Yes

Screen brightness Yes

Screen contrast Yes

Screen colour Yes

Screen backlight Yes

NETWORK AND COMMUNICATION **PROTOCOLS**

Type of LAN network Ethernet 10/100 Mbit/s IP address assignment DHCP, AUTO IP, static IP Operating system Android

ENVIRONMENTAL AND COMPLIANCE FEATURES	
IP protection degree	IP30
Operating temperature	-20° ÷ 55°
Operating humidity (RH	10% ÷ 95%


max - %)


Environmental class IV

Compliance and RoHS II - 2011/65/UE Certifications (EN 50581:2012), EMC 2014/30/UE (EN 61000-6-1:2007, EN 61000-6-3:2007+A1:2011)

	0.2007 17 11.2011)
HARDWARE FEATURES	
Comaptibility with Video Entry Comelit app	Yes
Compatibility with Comelit app (with external gateway)	Yes
Door opener	Yes
Self Activation	Yes
Intercom calls	Yes
Actuator control	Yes
CPS call	Yes
Outside door call input	Yes
Silent mode (Privacy)	Yes
Hands-free function	Yes
Priority calls	Yes

Description

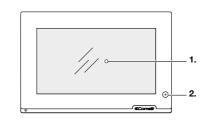

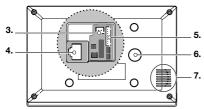

^{*} Cable supplied

- 1. LCD Display
 - · Touch screen
 - · 7" 16:9
 - · Pixel 1024x600
- 2. Microphone
- 3. Power input (18-24 VDC) * as an alternative to SPOE power supply
- 4. RJ45 SPOE (24 VDC) to connect art. 1442B
- 5. Input *

A8...A5 Not used

CFP Floor door call input

AL Alarm input

PAN Panic input

IN1 General purpose input

GND Ground for input


12V OUT Not used


- 6. Two magnets for fixing the door entry monitor to the bracket
- 7. Speaker


Operating distances


Power supply source	Type of power supply	Maximum distance
SPoE 24 VDC	UTP5 cat. 5 0,2 mm² or Ø 0,5 mm AWG 24	100 m
24 VDC	Pair of cables AWG 24	50 m
PoE with art. POESPLITTER (12 VDC)	Pair of cables AWG 26	1 m

Installation

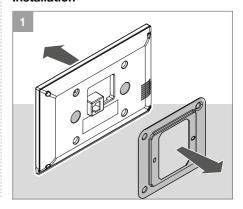

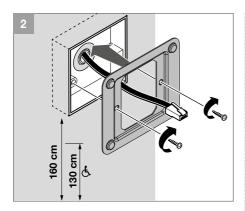

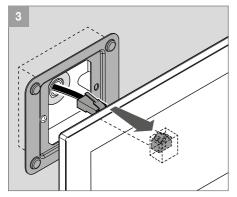

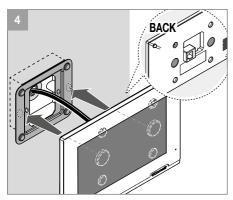


Configuration

CONFIGURATION WIZARD



Select the Wi-Fi network to which you wish to connect, enter the password, confirm and continue with guided configuration by pressing continue >

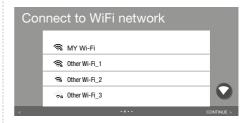

- 3. Set the date and time
 - to automatically update the date and time via internet:
 Activate "Automatically set Date & Time" and select your time zone
 - to set the device date and time manually:

 Deactivate "Automatically set Date & Time" and press the individual elements to customise them.

Continue with guided configuration by pressing continue >




 Set the ViP address for the device (8-character alphanumeric ID code provided by your installer) and choose whether you want to install the monitor as:


- Master unit (main monitor)
- Slave unit (secondary monitor)





- 5. Press "Complete" to complete the configuration process.
- Customisation and programming can be carried out via the setup menus, or using the ViP Manager software which is available to download from the website pro.comelitgroup.com


Accessing the Advanced Settings menu

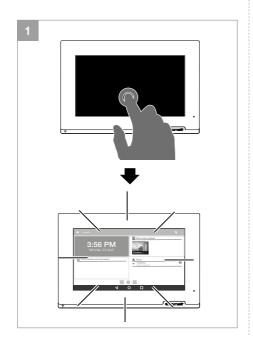

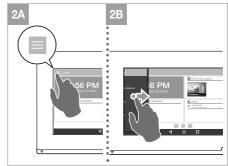


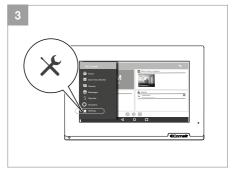

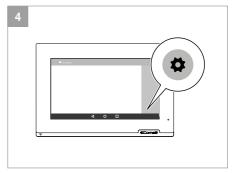


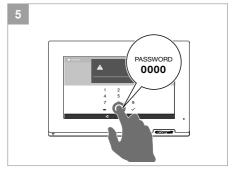


Basic wiring diagram

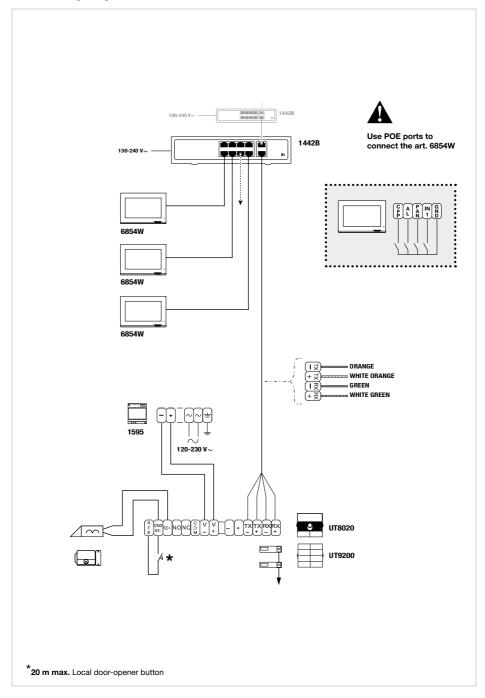

Variant with second external unit

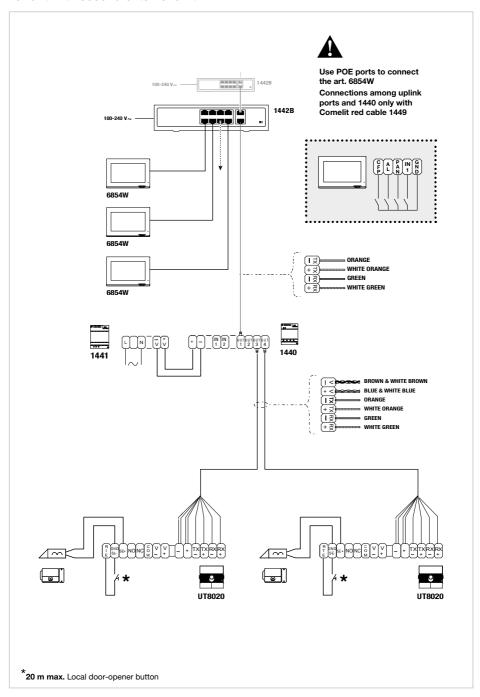

Variant with PoE standard switch

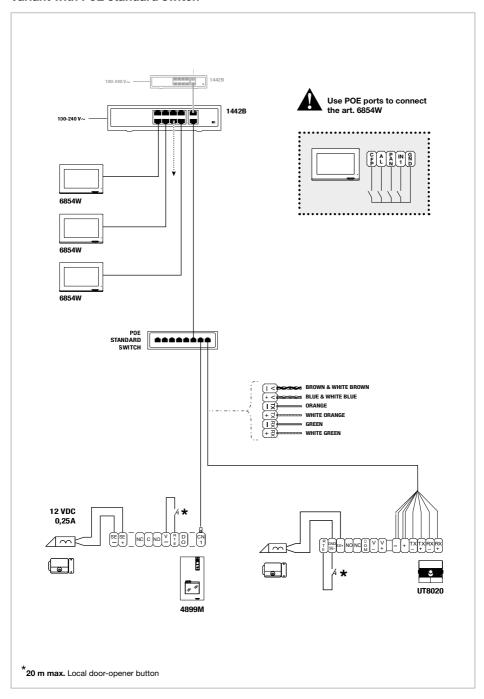



CERTIFIED MANAGEMENT SYSTEMS







WWW.Comelitgroup.com
Via Don Arrigoni, 5 - 24020 Rovetta (BG) - Italy

