


Mounting instructions / Montageanleitung
KNX Switching actuator / KNX Schaltaktor

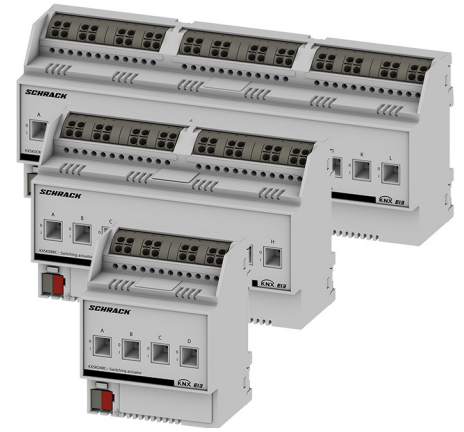

KXSK04RC--	KNX Switching actuator 4 x 16/20AX, 230V AC
KXSK08RC--	KNX Switching actuator 8 x 16/20AX, 230V AC
KXSK0CRC--	KNX Switching actuator 12 x 16/20AX, 230V AC



Contents / Lieferumfang





Required tools / Notwendige Werkzeuge



KXSK04RC--

KXSK08RC--

KXSK0CRC--

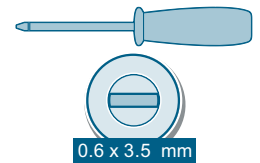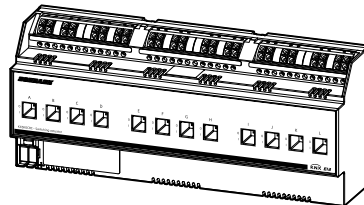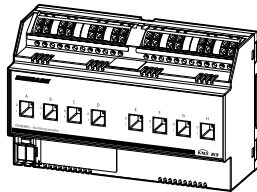
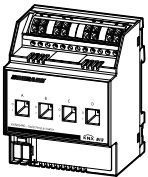


0.6 x 3.5 mm




Assembly / Montage


Removal / Demontage

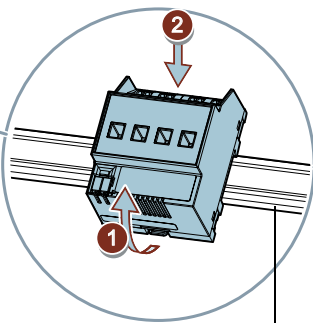
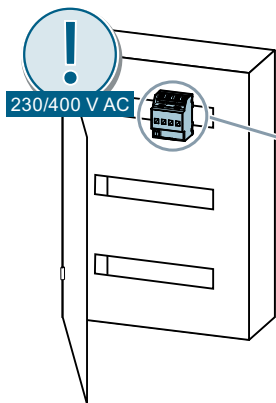


EN 60715-TH35

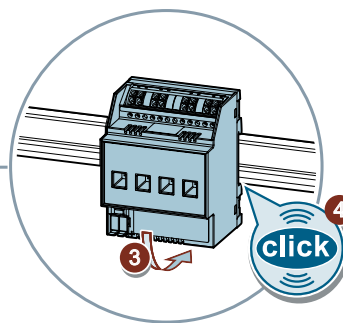


click


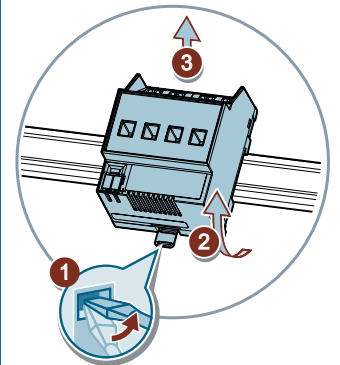


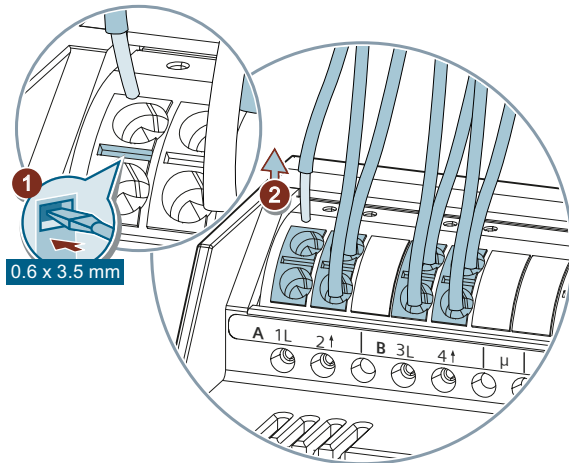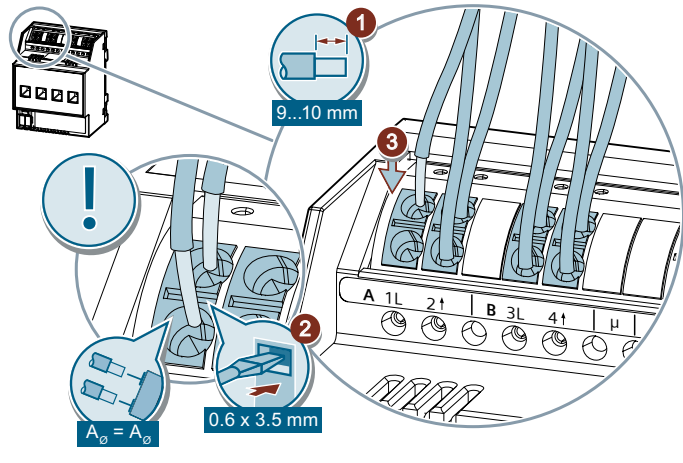

Cu		
	0.5 ... 2.5 mm ²	9 ... 10 mm
	2.5 mm ²	

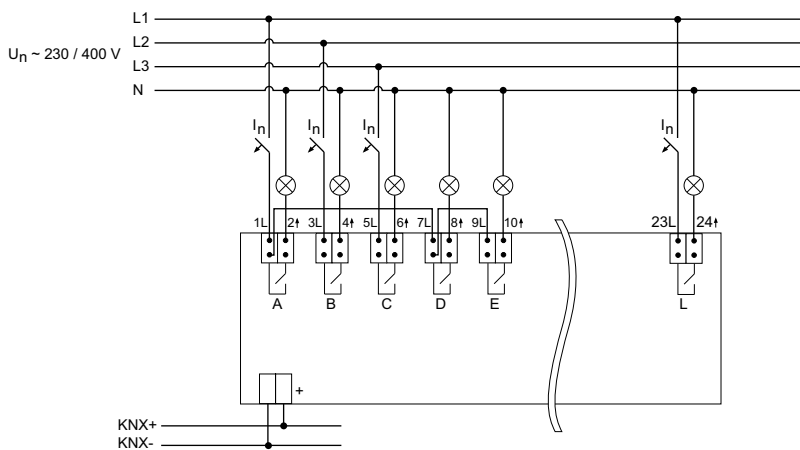



	KXSK04RC-- KXSK08RC-- KXSK0CRC--
Type / I _n	B / 16 A, B / 20 A
	3680 W
	16/20 AX
	2000 VA

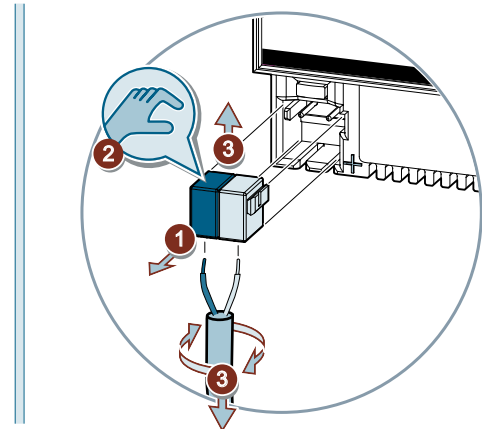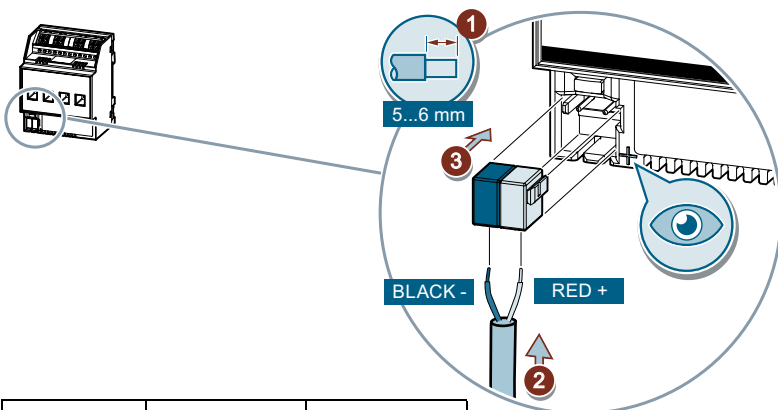


Cu		
	0.6 ... 0.8 mm ²	5 ... 6 mm



Test / Test

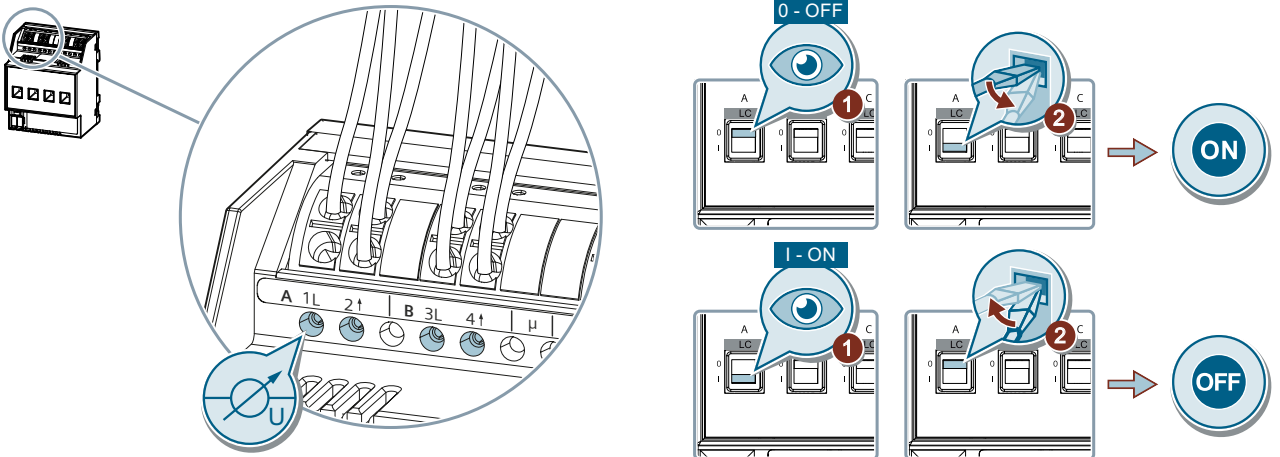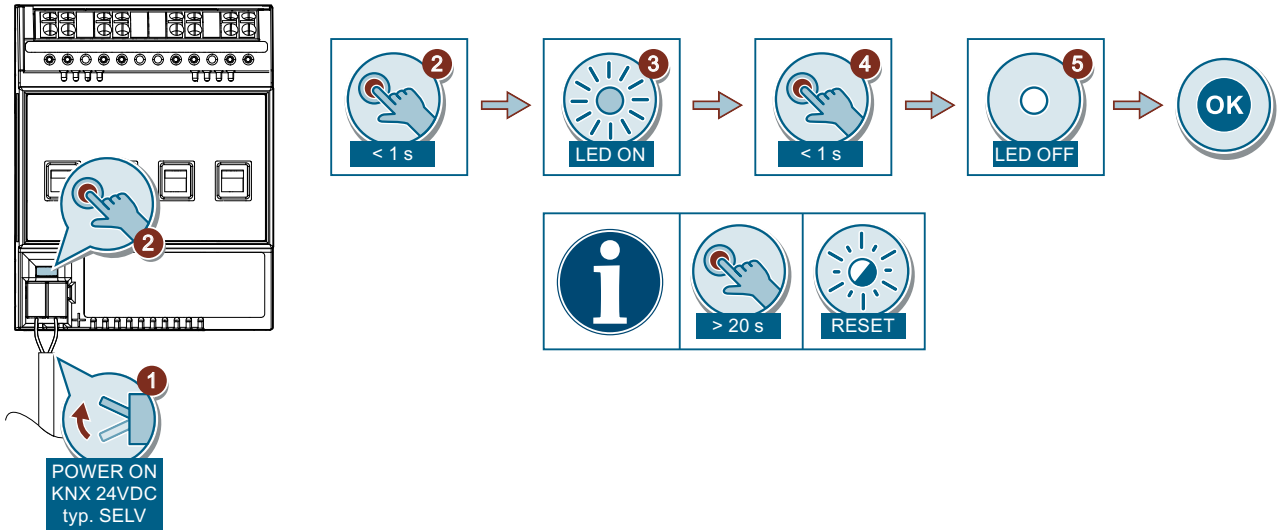

Information / Information

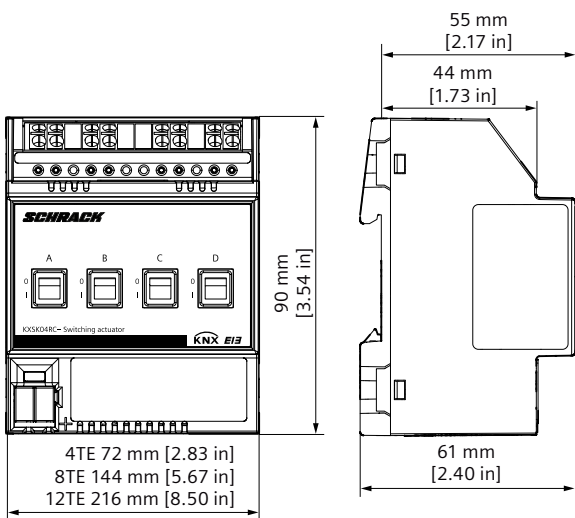

Ihre SCHRACK Niederlassungen vor Ort

ZENTRALE

SCHRACK TECHNIK GMBH
Seybelgasse 13, 1230 Wien
TEL +43(0)1/866 85-5900
FAX +43(0)1/866 85-98800
E-MAIL info@schrack.at

SCHRACK TOCHTERGESELLSCHAFTEN

BELGIEN

SCHRACK TECHNIK B.V.B.A.
Twaalfapostelenstraat 14
BE-9051 St-Denijs-Westrem
TEL +32 9/384 79 92
FAX +32 9/384 87 69
E-MAIL info@schrack.be

BOSNIEN-HERZEGOWINA

SCHRACK TECHNIK BH D.O.O.
Put za aluminijski kombinat bb
BH-88000 Mostar
TEL +387/36 333 666
FAX +387/36 333 667
E-MAIL mostar@schrack.ba

BULGARIEN

SCHRACK TECHNIK EOOD
Prof. Tsvetan Lazarov 162
Druzha – 2
BG-1000 Sofia
PHONE +359/(2) 890 79 13
FAX +359/(2) 890 79 30
E-MAIL sofia@schrack.bg

KROATIEN

SCHRACK TECHNIK D.O.O.
Zavrtnica 17
HR – 10000 Zagreb
TEL +385 1/605 55 00
FAX +385 1/605 55 66
E-MAIL schrack@schrack.hr

POLEN

SCHRACK TECHNIK POLSKA SP.Z.O.O.
ul. Staniewicka 5
PL-03-310 Warszawa
TEL +48 22/331 48 31
FAX +48 22/331 48 33
E-MAIL se@schrack.pl

RUMÄNIEN

SCHRACK TECHNIK SRL
Str. Simion Barnutiu nr. 15
RO-410204 Oradea
TEL +40 259/435 887
FAX +40 259/412 892
E-MAIL schrack@schrack.ro

SERBIEN

SCHRACK TECHNIK D.O.O.
Kumodraska 260
RS-11000 Beograd
TEL +38 1/11 309 2600
FAX +38 1/11 309 2620
E-MAIL office@schrack.co.rs

SLOWAKEI

SCHRACK TECHNIK SPOL. SR. O.
Komenskeho 18/A
SK-03601 Martin
TEL +42 1/43 422 16 41
FAX +42 1/43 423 95 56
E-MAIL martin@schrack.sk

SLOWENIEN

SCHRACK TECHNIK D.O.O.
Pameče 175
SLO-2380 Slovenj Gradec
TEL +38 6/2 883 92 00
FAX +38 6/2 884 34 71
E-MAIL schrack.sg@schrack.si

TSCHECHIEN

SCHRACK TECHNIK SPOL. SR. O.
Dolnomecholupska 2
CZ-10200 Praha 10 – Hostivar
TEL +42(0)2/810 08 264
FAX +42(0)2/810 08 462
E-MAIL praha@schrack.cz

UNGARN

SCHRACK TECHNIK KFT.
Vidor u. 5
H-1172 Budapest
TEL +36 1/253 14 01
FAX +36 1/253 14 91
E-MAIL schrack@schrack.hu

Schrack Sales Organization in Your Country

HEADQUARTER

SCHRACK TECHNIK GMBH
Seybelgasse 13, 1230 Wien
TEL + 49 (0)1/866 85-5900
FAX +43(0)1/866 85-98800
E-Mail info@schrack.at

SCHRACK SUBSIDIARIES

BELGIUM

SCHRACK TECHNIK B.V.B.A.
Twaalfapostelenstraat 14
BE-9051 St-Denijs-Westrem
TEL +32 9/384 79 92
FAX +32 9/384 87 69
E-MAIL info@schrack.be

BOSNIA-HERZEGOVINA

SCHRACK TECHNIK BH D.O.O.
Put za aluminijski kombinat bb
BH-88000 Mostar
TEL +387/36 333 666
FAX +387/36 333 667
E-MAIL mostar@schrack.ba

BULGARIA

SCHRACK TECHNIK EOOD
Prof. Tsvetan Lazarov 162
Druzha – 2
BG-1000 Sofia
PHONE +359/(2) 890 79 13
FAX +359/(2) 890 79 30
E-MAIL sofia@schrack.bg

CROATIA

SCHRACK TECHNIK D.O.O.
Zavrtnica 17
HR – 10000 Zagreb
TEL +385 1/605 55 00
FAX +385 1/605 55 66
E-MAIL schrack@schrack.hr

POLAND

SCHRACK TECHNIK POLSKA SP.Z.O.O.
ul. Staniewicka 5
PL-03-310 Warszawa
TEL +48 22/331 48 31
FAX +48 22/331 48 33
E-MAIL se@schrack.pl

ROMANIA

SCHRACK TECHNIK SRL
Str. Simion Barnutiu nr. 15
RO-410204 Oradea
TEL +40 259/435 887
FAX +40 259/412 892
E-MAIL schrack@schrack.ro

SERBIA

SCHRACK TECHNIK D.O.O.
Kumodraska 260
RS-11000 Beograd
TEL +38 1/11 309 2600
FAX +38 1/11 309 2620
E-MAIL office@schrack.co.rs

SLOVAKIA

SCHRACK TECHNIK SPOL. SR. O.
Komenskeho 18/A
SK-03601 Martin
TEL +42 1/43 422 16 41
FAX +42 1/43 423 95 56
E-MAIL martin@schrack.sk

SLOVENIA

SCHRACK TECHNIK D.O.O.
Pameče 175
SLO-2380 Slovenj Gradec
TEL +38 6/2 883 92 00
FAX +38 6/2 884 34 71
E-MAIL schrack.sg@schrack.si

CZECH REPUBLIC

SCHRACK TECHNIK SPOL. SR. O.
Dolnomecholupska 2
CZ-10200 Praha 10 – Hostivar
TEL +42(0)2/810 08 264
FAX +42(0)2/810 08 462
E-MAIL praha@schrack.cz

HUNGARY

SCHRACK TECHNIK KFT.
Vidor u. 5
H-1172 Budapest
TEL +36 1/253 14 01
FAX +36 1/253 14 91
E-MAIL schrack@schrack.hu

