


Venetian blind actuator  
Jalousieaktor

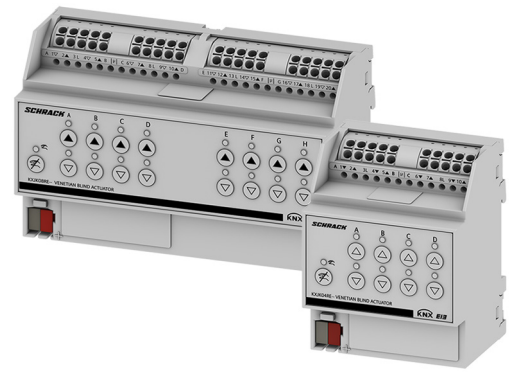

KXJK04RE--  
KXJK08RE--



Operating Instructions Betriebsanleitung



 
 
 


Contents / Lieferumfang

Required tools / Notwendige Werkzeuge







KXJK04RE--

KXJK08RE--

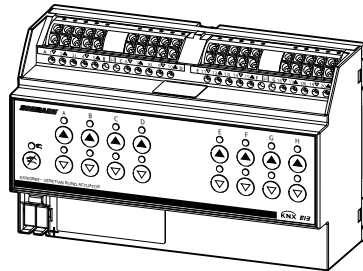
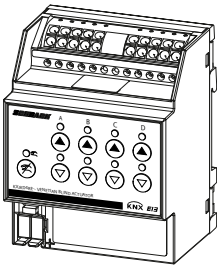


Assembly / Montage



Removal / Demontage

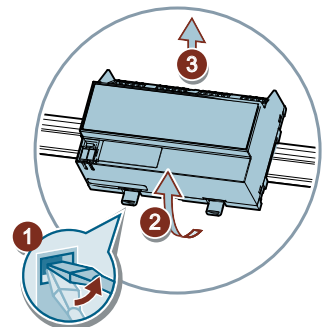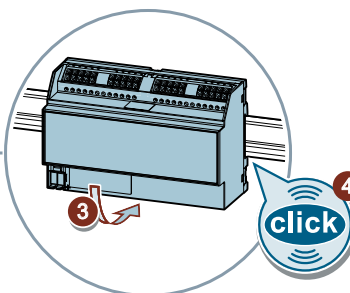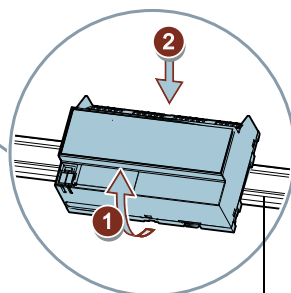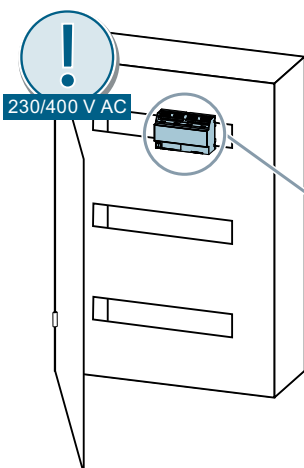

EN 60715-TH35

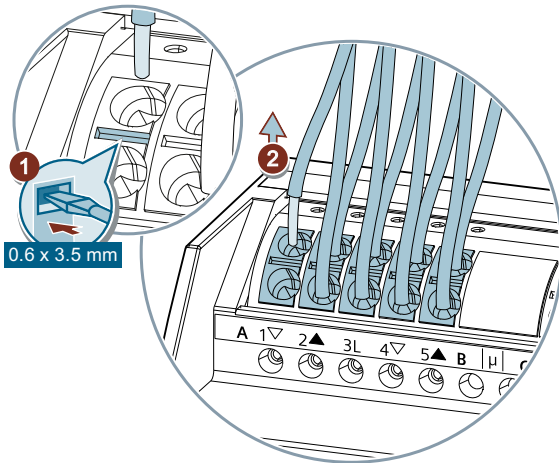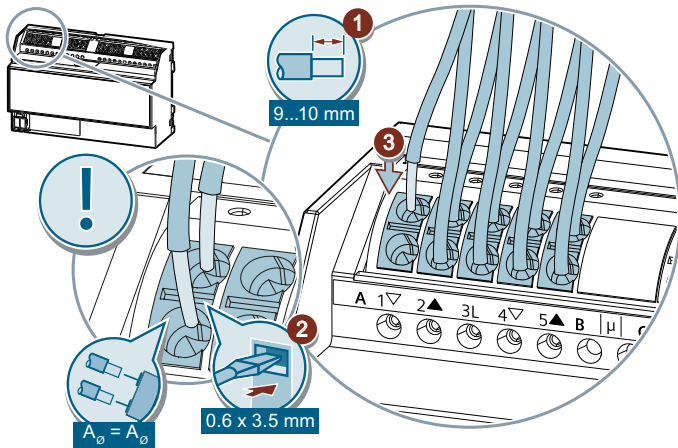


Cu	
	0.5 ... 2.5 mm <sup>2</sup>
	2.5 mm <sup>2</sup>

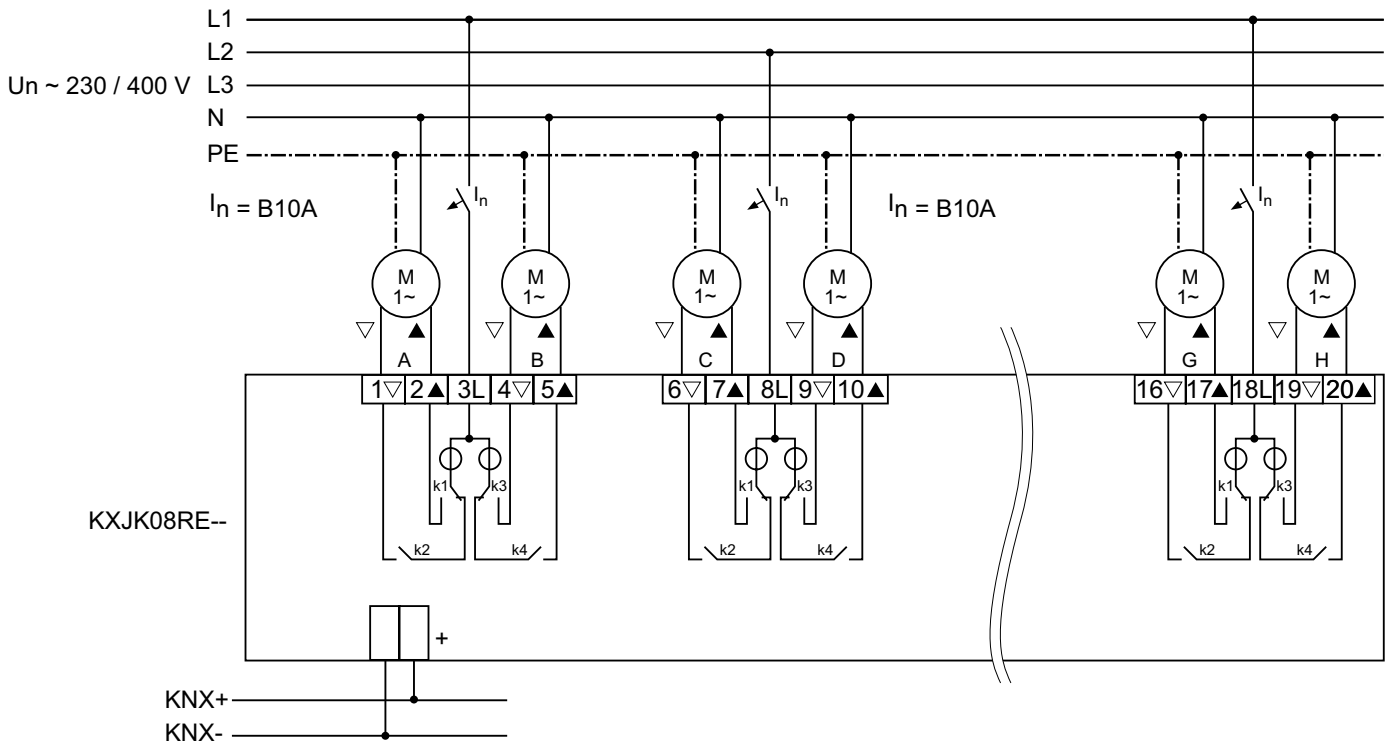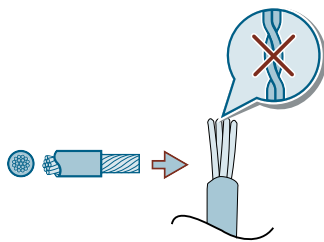





### Connection / Anschluss

### Disconnection / Trennung

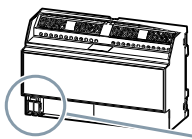



Cu	
	0.6 ... 0.8 mm

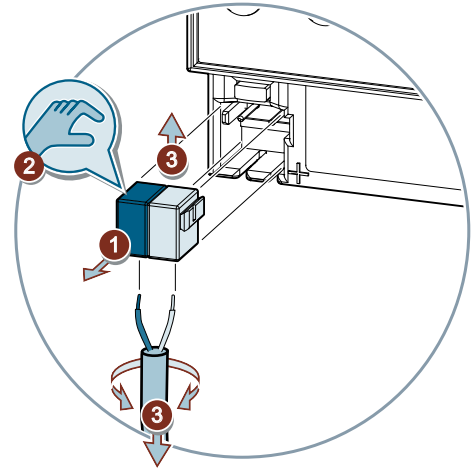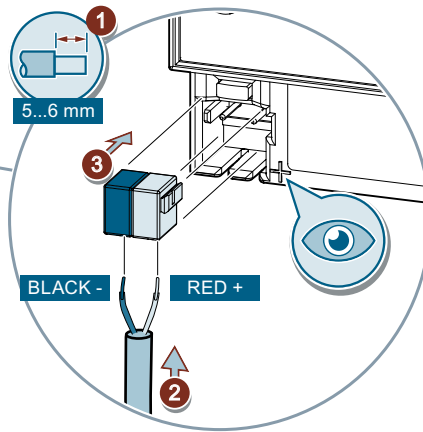



### Test / Test




#### KNX 24 V DC typ. SELV

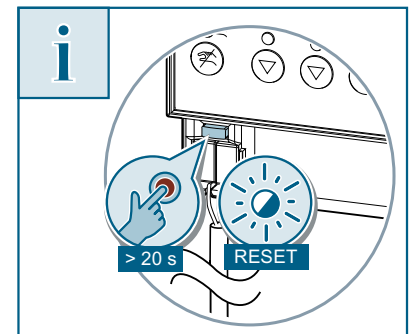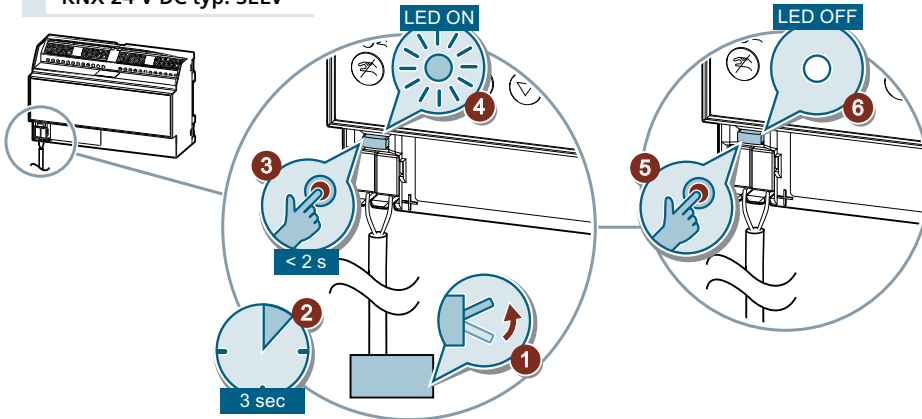

#### A|B|C|D|E|F|G|H U<sub>n</sub> ~ 230 V

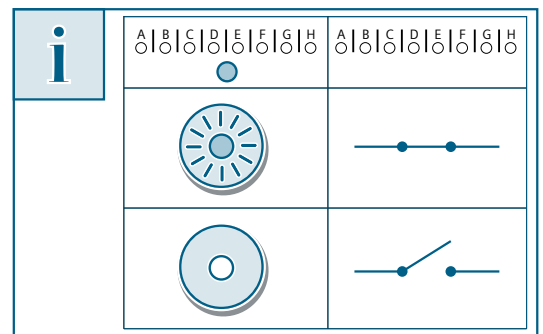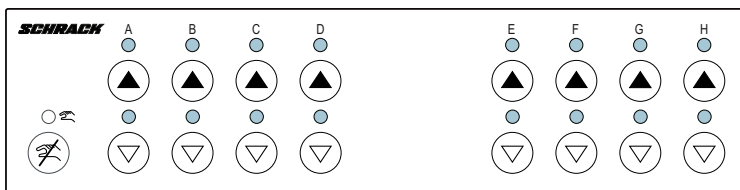


Test / Test

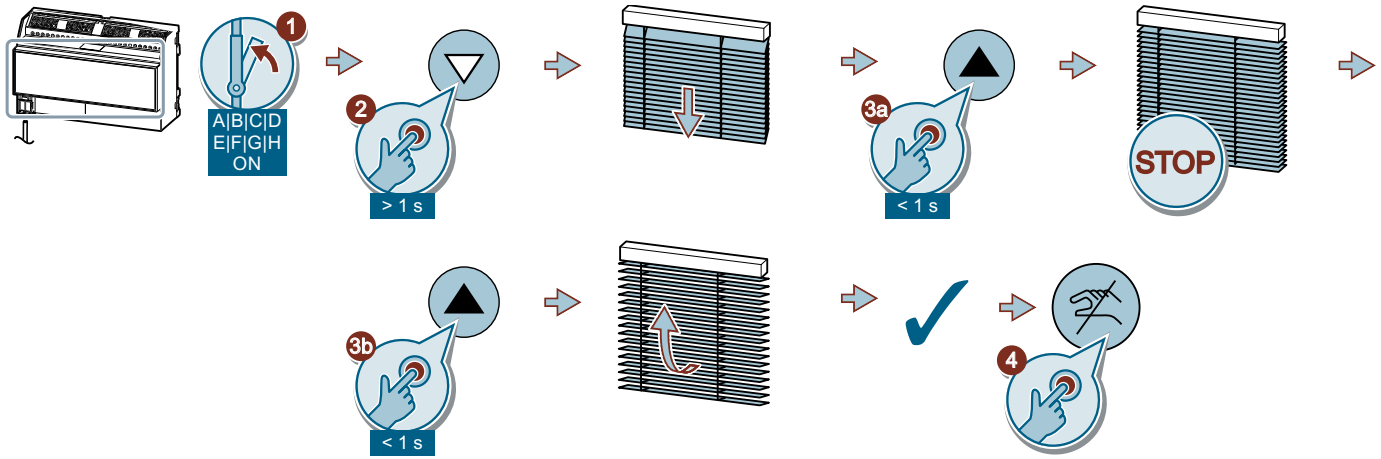

	1	2	3a	3b	4
A   B   C   D   E   F   G   H   ▲					
A   B   C   D   E   F   G   H   ▼					

Information / Information

A 1 ▽ 2 ▲ 3 L 4 ▽ 5 ▲ B | μ C 6 ▽ 7 ▲ 8 L 9 ▽ 10 ▲ D      E 11 ▽ 12 ▲ 13 L 14 ▽ 15 ▲ F | μ G 16 ▽ 17 ▲ 18 L 19 ▽ 20 ▲ H

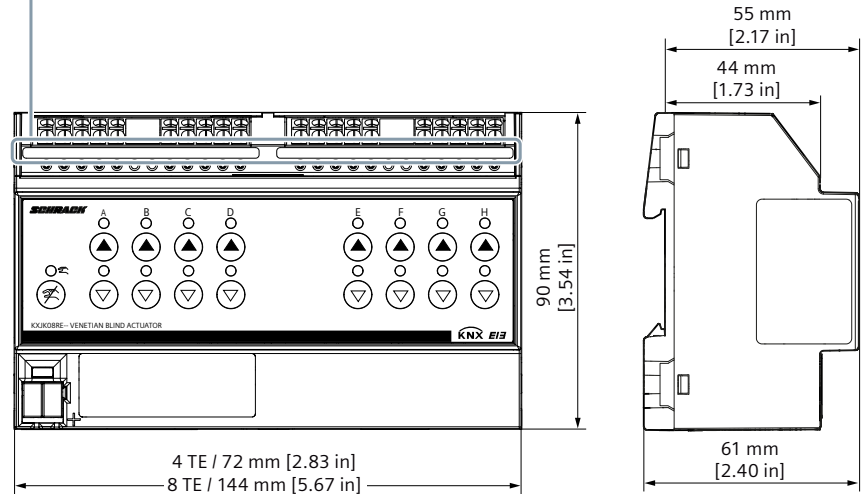

-5 ... +45°C

20

INDOOR

5 ... 95 r. H. %

-20 ... +70°C



# Ihre SCHRACK Niederlassungen vor Ort

## ZENTRALE

SCHRACK TECHNIK GMBH  
Seybelgasse 13, 1230 Wien  
TEL +43(0)1/866 85-5900  
FAX +43(0)1/866 85-98800  
E-MAIL info@schrack.at

## SCHRACK TOCHTERGESELLSCHAFTEN

### BELGIEN

SCHRACK TECHNIK B.V.B.A.  
Twaalfapostelenstraat 14  
BE-9051 St-Denijs-Westrem  
TEL +32 9/384 79 92  
FAX +32 9/384 87 69  
E-MAIL info@schrack.be

### BOSNIEN-HERZEGOWINA

SCHRACK TECHNIK BH D.O.O.  
Put za aluminijski kombinat bb  
BH-88000 Mostar  
TEL +387/36 333 666  
FAX +387/36 333 667  
E-MAIL mostar@schrack.ba

### BULGARIEN

SCHRACK TECHNIK EOOD  
Prof. Tsvetan Lazarov 162  
Druzhiba – 2  
BG-1000 Sofia  
PHONE +359/(2) 890 79 13  
FAX +359/(2) 890 79 30  
E-MAIL sofia@schrack.bg

### KROATIEN

SCHRACK TECHNIK D.O.O.  
Zavrtnica 17  
HR – 10000 Zagreb  
TEL +385 1/605 55 00  
FAX +385 1/605 55 66  
E-MAIL schrack@schrack.hr

### POLEN

SCHRACK TECHNIK POLSKA SP.Z.O.O.  
ul. Staniewicka 5  
PL-03-310 Warszawa  
TEL +48 22/331 48 31  
FAX +48 22/331 48 33  
E-MAIL se@schrack.pl

### RUMÄNIEN

SCHRACK TECHNIK SRL  
Str. Simion Barnutiu nr. 15  
RO-410204 Oradea  
TEL +40 259/435 887  
FAX +40 259/412 892  
E-MAIL schrack@schrack.ro

### SERBIEN

SCHRACK TECHNIK D.O.O.  
Kumodraska 260  
RS-11000 Beograd  
TEL +38 1/11 309 2600  
FAX +38 1/11 309 2620  
E-MAIL office@schrack.co.rs

### SLOWAKEI

SCHRACK TECHNIK SPOL. SR. O.  
Komenskeho 18/A  
SK-03601 Martin  
TEL +42 1/43 422 16 41  
FAX +42 1/43 423 95 56  
E-MAIL martin@schrack.sk

### SLOWENIEN

SCHRACK TECHNIK D.O.O.  
Pameče 175  
SLO-2380 Slovenj Gradec  
TEL +38 6/2 883 92 00  
FAX +38 6/2 884 34 71  
E-MAIL schrack.sg@schrack.si

### TSCHECHIEN

SCHRACK TECHNIK SPOL. SR. O.  
Dolnomecholupska 2  
CZ-10200 Praha 10 – Hostivar  
TEL +42(0)2/810 08 264  
FAX +42(0)2/810 08 462  
E-MAIL praha@schrack.cz

### UNGARN

SCHRACK TECHNIK KFT.  
Vidor u. 5  
H-1172 Budapest  
TEL +36 1/253 14 01  
FAX +36 1/253 14 91  
E-MAIL schrack@schrack.hu

---

## Schrack Sales Organization in Your Country

### HEADQUARTER

SCHRACK TECHNIK GMBH  
Seybelgasse 13, 1230 Wien  
TEL + 49 (0)1/866 85-5900  
FAX +43(0)1/866 85-98800  
E-Mail info@schrack.at

### SCHRACK SUBSIDIARIES

#### BELGIUM

SCHRACK TECHNIK B.V.B.A.  
Twaalfapostelenstraat 14  
BE-9051 St-Denijs-Westrem  
TEL +32 9/384 79 92  
FAX +32 9/384 87 69  
E-MAIL info@schrack.be

#### BOSNIA-HERZEGOVINA

SCHRACK TECHNIK BH D.O.O.  
Put za aluminijski kombinat bb  
BH-88000 Mostar  
TEL +387/36 333 666  
FAX +387/36 333 667  
E-MAIL mostar@schrack.ba

#### BULGARIA

SCHRACK TECHNIK EOOD  
Prof. Tsvetan Lazarov 162  
Druzhiba – 2  
BG-1000 Sofia  
PHONE +359/(2) 890 79 13  
FAX +359/(2) 890 79 30  
E-MAIL sofia@schrack.bg

#### CROATIA

SCHRACK TECHNIK D.O.O.  
Zavrtnica 17  
HR – 10000 Zagreb  
TEL +385 1/605 55 00  
FAX +385 1/605 55 66  
E-MAIL schrack@schrack.hr

#### POLAND

SCHRACK TECHNIK POLSKA SP.Z.O.O.  
ul. Staniewicka 5  
PL-03-310 Warszawa  
TEL +48 22/331 48 31  
FAX +48 22/331 48 33  
E-MAIL se@schrack.pl

#### ROMANIA

SCHRACK TECHNIK SRL  
Str. Simion Barnutiu nr. 15  
RO-410204 Oradea  
TEL +40 259/435 887  
FAX +40 259/412 892  
E-MAIL schrack@schrack.ro

#### SERBIA

SCHRACK TECHNIK D.O.O.  
Kumodraska 260  
RS-11000 Beograd  
TEL +38 1/11 309 2600  
FAX +38 1/11 309 2620  
E-MAIL office@schrack.co.rs

#### SLOVAKIA

SCHRACK TECHNIK SPOL. SR. O.  
Komenskeho 18/A  
SK-03601 Martin  
TEL +42 1/43 422 16 41  
FAX +42 1/43 423 95 56  
E-MAIL martin@schrack.sk

#### SLOVENIA

SCHRACK TECHNIK D.O.O.  
Pameče 175  
SLO-2380 Slovenj Gradec  
TEL +38 6/2 883 92 00  
FAX +38 6/2 884 34 71  
E-MAIL schrack.sg@schrack.si

#### CZECH REPUBLIC

SCHRACK TECHNIK SPOL. SR. O.  
Dolnomecholupska 2  
CZ-10200 Praha 10 – Hostivar  
TEL +42(0)2/810 08 264  
FAX +42(0)2/810 08 462  
E-MAIL praha@schrack.cz

#### HUNGARY

SCHRACK TECHNIK KFT.  
Vidor u. 5  
H-1172 Budapest  
TEL +36 1/253 14 01  
FAX +36 1/253 14 91  
E-MAIL schrack@schrack.hu

