



Lüftungshülse

Montageanleitung


Montage im Fertigteilwerk

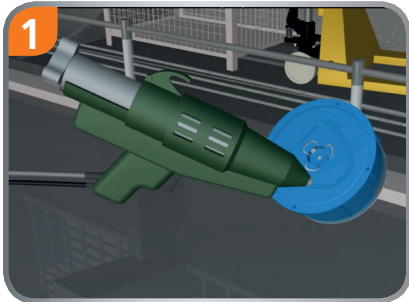

1. Variante: Mit Heißkleber auf Arbeitstisch kleben.

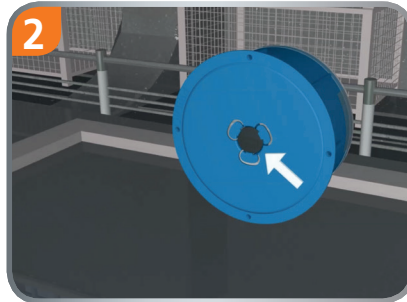


2. Variante: Mit Magnet auf Arbeitstisch positionieren.

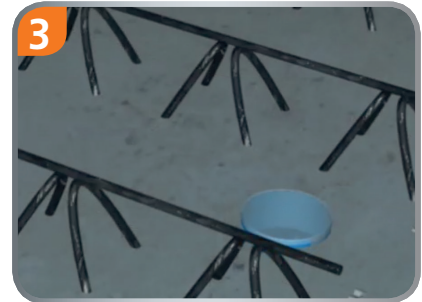


Fertigdecke wird betoniert.



Schutzdeckel von Lüftungshülse entfernen.

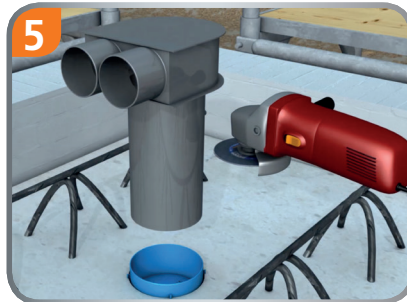

Stutzen auf gewünschte Länge kürzen und in Hülse einschieben.

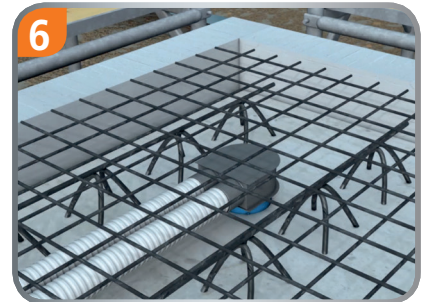

Rohre anschließen, obere Bewehrung einbringen und betonieren.




Lüftungshülse von unten mit Hammer einschlagen.



Adapterring von Luftauslass kann direkt angeschraubt werden.



Standardlüftungsauslässe Ø 125 mm können montiert werden.




Art.-Nr.	Bezeichnung	VPE
P712	Lüftungshülse 125 mm	34
P712M	Lüftungshülse 125 mm mit Magnetbefestigung	34
P716	Magnet Durchmesser 30mm zur Befestigung auf Stahlschalungen	10




Ventilation sleeve


Installation at a precast factory

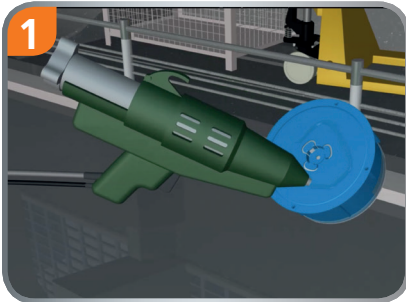

Option 1: Paste the ventilation sleeve on the formwork with a hot glue.

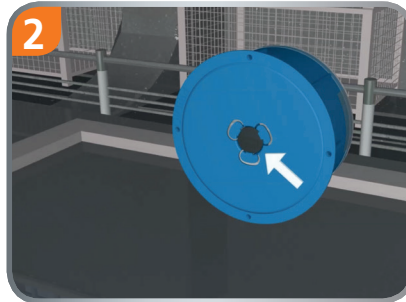


Option 2: Position the ventilation sleeve with the magnet on the formwork.

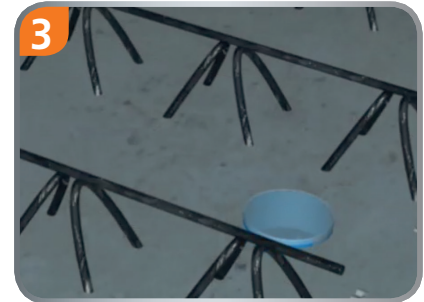


Insert the steel strutting and pour the concrete.



Remove the protection cover from the ventilation sleeve.

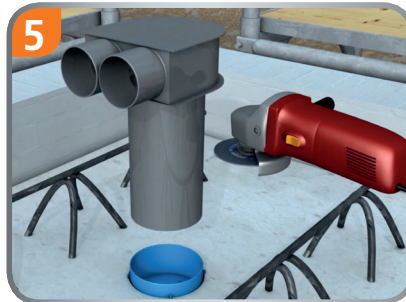

Cut the component to the desired length and slide it into the ventilation sleeve.

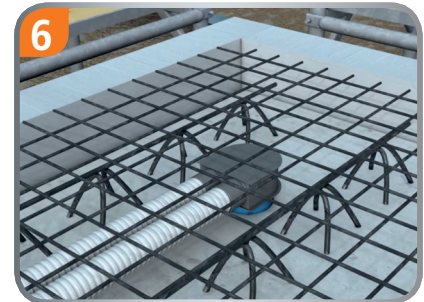

Connect the pipes, insert steel strutting and pour concrete.




Open the bottom of the ventilation sleeve with a hammer.



Install the ventilation output connector.



You can install a standard ventilation output Ø 125 mm.



Order-no.	Name	VPE
P712	Ventilation sleeve 125 mm	34
P712M	Ventilation sleeve 125 mm with magnetic attachment	34
P716	Magnet to fix the formwork (30 mm)	10

