

Universalgroßdose

Für Plattendecken und vieles mehr


Montage im Ortbeton



1 Loch mit Stanzzange ausstanzen.



2 Deckel aufdrehen.

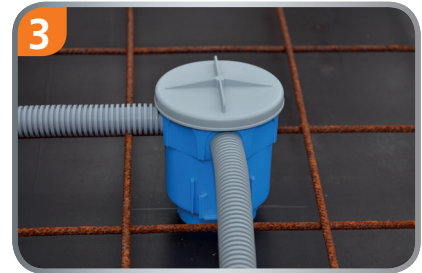


3 Montage als Deckengroßdose.



4 Montage mit Deckenhaken.
(Maximale Belastung 10 kg).




5 Wandmontage als Elektronikgroßdose.

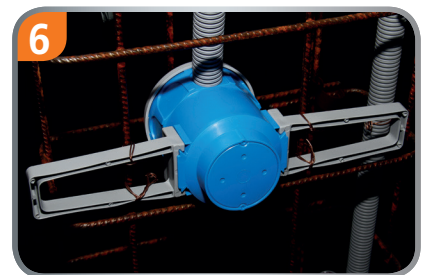


6 Montage als Elektronikgroßdose mit Flügeln.

Montage im Fertigteilwerk

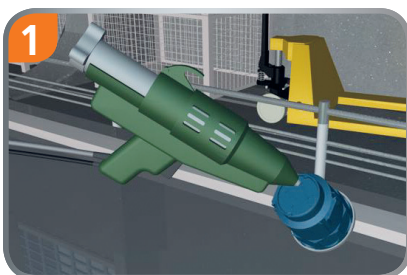

1 Universalgroßdose mit Heißkleber auf den Schaltisch kleben.

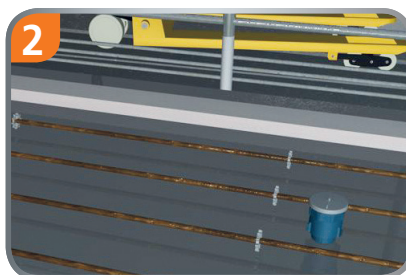

2 Stahlarmierung wird eingebracht.



3 Betonfertigteil wird gegossen.



Art.-Nr.	Bezeichnung	VPE
P421	Universalgroßdose für Beton	50
P534	Deckenhaken 120 mm Länge	100
P418	Flügel für Primo Betonprogramm	50



Universal connection box For precast ceilings

Installation in the cast-in-place concrete


Assembly instruction



1 Punching a hole for the concrete pipe.



2 Twist on the cover.

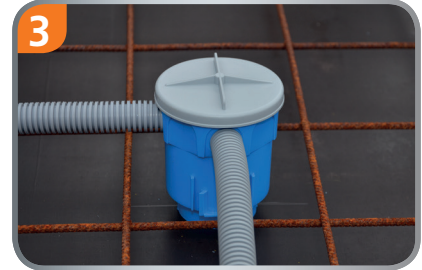


3 Installation as ceiling box.



4 Installation with ceiling hook (max 10 kg.)




5 Wall installation as electronic box.

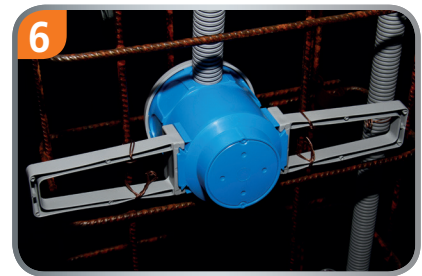


6 Installation as electronic box with wings.


Installation at a precast factory

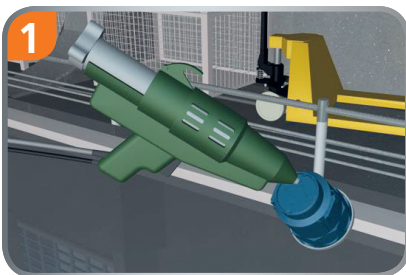


1 Paste the box on the formwork.

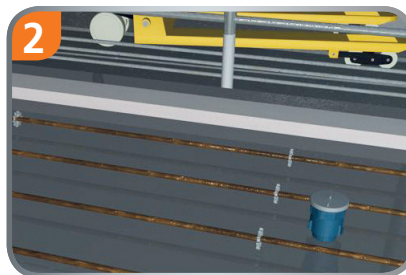

2 Steel strutting is brought in.

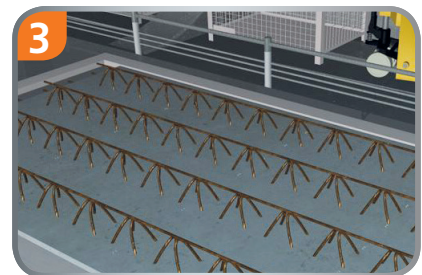

3 Cast the precast ceiling



Order-No.	Name	VPE
P421	Universal connection box	50
P534	Ceiling hooks 120 mm	100
P418	Primo concrete wings	50

