



■ MONTAGEANLEITUNG:

HSER0240GS TOOLLESS LINE PATCHPANEL LEER FÜR 24xKEYSTONE 19", 1HE  
HSER0480GS TOOLLESS LINE PATCHPANEL LEER FÜR 48xKEYSTONE 19", 2HE


- A.) Zuerst das Erdungskabel an das Patchpanel anschliessen. Richten Sie die Zunge der Kabelabfangung an einer Seite mit dem entsprechenden Einhängeschlitz aus und setzen Sie die Zunge ein. Siehe Foto 1

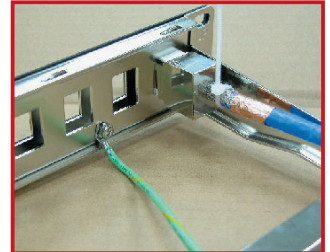

- B.) Richten Sie die Zunge der Kabelabfangung an der zweiten Seite mit dem entsprechenden Einhängeschlitz aus und setzen Sie die Zunge ein. Drücken Sie die Kabelabfangung nach unten in die Kerbe. Siehe Foto 2.

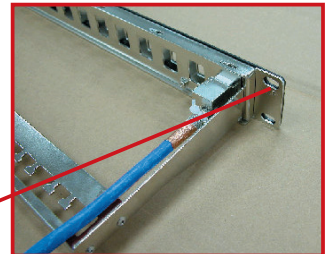



- C.) Setzen Sie das Modul schräg in die Öffnung des Patchpanels. Die fixe Befestigungsklammer des Moduls wird dabei an der Unterseite des Panels eingerastet. Siehe Foto 3.

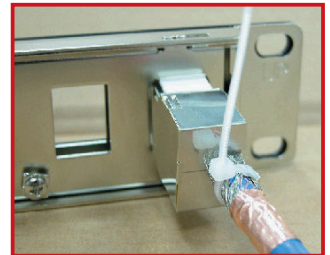

- D.) Mit eingerasteter unterer Klammer, das Modul nach oben drehen bis die flexible Klammer des Moduls im Patchpanel einrastet. Siehe Foto 4. Beim Einrasten ist ein leises Klicken zu hören.



- E.) Nach dem Einsetzen des Moduls ist das Kabel mittels Kabelbinder am Kamm der Kabelabfangung zu befestigen. Siehe Foto 5. Es ist darauf zu achten, dass das Kabel hierbei nicht gequetscht wird!

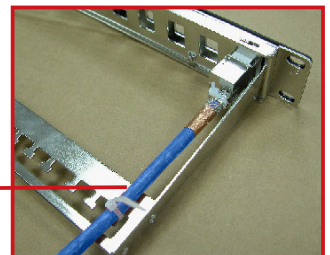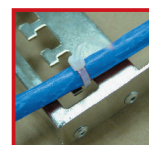


- F.) Wiederholen Sie C.) bis E.) bis alle Module eingebaut sind.


■ MONTAGEANLEITUNG:

HSER0240GS TOOLLESS LINE PATCHPANEL EMPTY FOR 24xKEYSTONE 19", 1U  
HSER0480GS TOOLLESS LINE PATCHPANEL EMPTY FOR 48xKEYSTONE 19", 2U


A.) Screw drain wire to the Patchpanel first. Align the tongue on one side of the wire minder with the corresponding groove on the Patchpanel and insert it into the groove. See foto 1

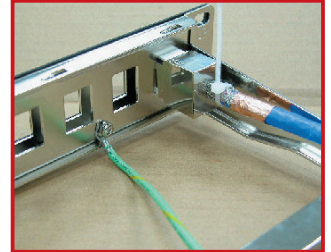


B.) Align the tongue on the other side of the wire minder with the corresponding groove on the Patchpanel and insert it into the groove. Push the wire minder down in the slot. See foto 2

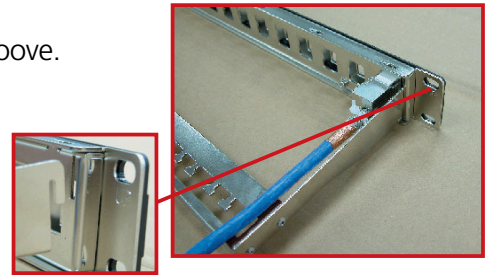


C.) Insert the Jack into the opening in the Patchpanel at an angle with the non-flexing side of the keystone latch facing down. See foto 3.

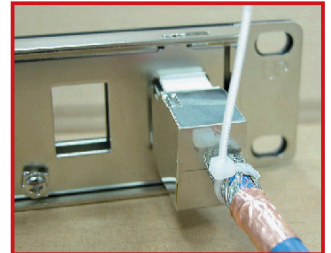

D.) With the bottom latch engaged to the Patchpanel, rotate the Jack upward until the flexing side of the keystone latch engages with the Patchpanel as shown in foto 4. There should be a slight clicking sound as the latch engages.

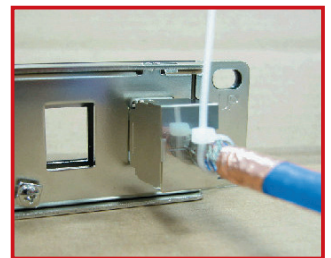

E.) After the installation of a Jack, use a tie wrap to attach their wires to the cable management as shown in foto 5. Do not overtighten the tie wrap! It should be snug, but not so tight that it crushes the wires.

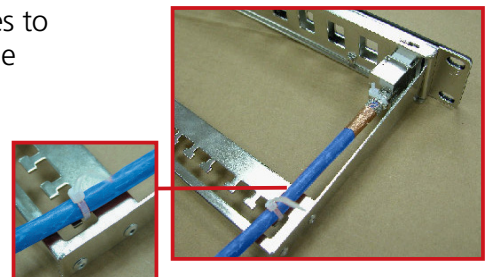

F.) Continue C.) to E.) until all the Jacks have been installed.